

12/88

EFFECTIVE SERIAL NO. 50-EF-388

Auto Crane Company

P.O. BOX 580697 • TULSA, OKLAHOMA 74158-0697
4707 N. MINGO ROAD • TULSA, OKLAHOMA 74117
918-836-0463 • TELEX 158108 RAMSEY TUL
FAX 918-438-6688

OWNER'S MANUAL

5005H

SERIAL NO. _____

WARNING:

FEDERAL LAW (49 CFR PART 571) REQUIRES THAT THE FINAL STAGE MANUFACTURER OF A VEHICLE CERTIFY THAT THE VEHICLE COMPLIES WITH ALL APPLICABLE FEDERAL REGULATIONS. ANY MODIFICATIONS PERFORMED ON THE VEHICLE PRIOR TO THE FINAL STAGE ARE ALSO CONSIDERED INTERMEDIATE STAGE MANUFACTURING AND MUST BE CERTIFIED AS TO COMPLIANCE. THE INSTALLER OF THIS CRANE AND BODY IS CONSIDERED ONE OF THE MANUFACTURERS OF THE VEHICLE. AS SUCH A MANUFACTURER, THE INSTALLER IS RESPONSIBLE FOR COMPLIANCE WITH ALL APPLICABLE FEDERAL AND STATE REGULATIONS, AND IS REQUIRED TO CERTIFY THAT THE VEHICLE IS IN COMPLIANCE.

IT IS THE FURTHER RESPONSIBILITY OF THE INSTALLER OF THE CRANE TO COMPLY WITH THE OSHA TRUCK CRANE STABILITY REQUIREMENTS AS SPECIFIED BY 29 CFR PART 1910.180 (C) (1).

5005H SERIES - OWNER'S MANUAL

- CONTENTS -

	SECTION/PAGE
1. INTRODUCTION-5005H SERIES.....	1-1.0.0
2. SAFETY TIPS AND PRECAUTIONS.....	1-2.0.0
3. OPERATION OF UNIT/HYDRAULIC OUTRIGGERS.....	1-3.0.0
4. MOUNTING AND INSTALLATION.....	2-1.0.0
5. MAINTENANCE.....	3-1.0.0
6. GENERAL ASSEMBLY.....	4-1.0.0
7. HOIST ACTUATOR.....	4-3.0.0
8. AUTOMATIC SAFETY BRAKE.....	4-4.0.0
9. ROTATION GEAR BOX.....	4-5.0.0
10. ELECTRICAL SECTION.....	5-1.0.0
11. HYDRAULIC SECTION.....	6-1.0.0
12. RESERVOIR ASSEMBLY.....	6-5.0.0
13. OUTRIGGERS.....	6-10.0.0
14. LOAD CHART.....	7-1.0.0
15. GENERAL DIMENSIONS.....	8-1.0.0
16. STABILIZERS.....	9-1.0.0
17. WARRANTY.....	LAST PAGE

INTRODUCTION 5005H SERIES

Auto Crane products have been engineered to provide safe, trouble-free, dependable service for many years when these products are properly used and maintained.

To assist you in obtaining the best service from your crane and to avoid untimely failure of the unit and/or the vehicle on which it is mounted, the following operating and service instructions are herein published, and it is specifically recommended that all operating and service personnel consider this manual as mandatory material for reading and study before operating or servicing Auto Crane products. It is highly recommended that crane owners, equipment managers and supervisors also read this manual.

Auto Crane has incorporated several safety features in the 5005H series for your protection. The material and electrical systems were designed to minimize weight and lengthen durability. The hydraulic components are designed for a 4:1 safety factor. Holding valves are installed on the power versions to prevent the load from dropping if a hose should fail. A 10u filter is installed in the hydraulic system to remove dirt and grit that may cause premature failure. The reservoir is protected with a 15u filter in the filler cap, and a 40 mesh strainer in the suction line.

For your convenience the overall dimensions of the 5005H series are included on the General Dimension Drawing. Rotation and turning radius are also listed. See page 8-1.0.0.

Remember that the crane adds weight to the vehicle and may change the driving and riding characteristics of the vehicle on which it is mounted unless this weight is properly provided for with appropriate overload springs. The payload of the vehicle is also reduced by the amount that the crane weighs, and as the vehicle is loaded, care should be exercised not to overload the vehicle. Exercising care in distributing the payload on the vehicle will greatly improve the driving and riding characteristics of the vehicle. A minimum G.V.W. of 10,500 lbs. is recommended for mounting the 5005H series cranes.

Auto Crane Company issues a limited warranty certificate with each unit sold. See last page for warranty policy.

It has always been Auto Crane Company policy to handle all warranty claims we receive as promptly as possible. If material or workmanship is involved, immediate corrective action is taken. It is therefore, understandable that Auto Crane Company cannot

assume responsibility or liability when our products have obviously been abused, mis-used, overloaded or otherwise damaged by inexperienced persons trying to operate the equipment without even reading the manual. The Auto Crane is designed and built to be safe and efficient. Auto Crane will not assume responsibility or liability for any unit which has been modified, changed, or which has unauthorized or unapproved components installed.

Auto Crane maintains a strong distributor network and a knowledgeable Customer Service Department. In most cases an equipment problem can be solved through a telephone conversation with our Customer Service Department. The Customer Service Department also has the ability to bring a local distributor, a regional sales manager, or a factory serviceman into the solution of an equipment problem if necessary. If through no fault of Auto Crane Company it is necessary to send an experienced factory serviceman on a field service call, the rates stated in the Auto Crane, Distributor's Flat Rate Manual will apply.

Auto Crane Company's extensive Research and Development Program assures our customers of the best equipment on the market, and our Engineering Staff, as well as our knowledgeable sales people are always available to our customers in solving crane and winch-type application problems. When in doubt-call the the Auto Crane factory.

DISTRIBUTOR ASSISTANCE:

Should you require any assistance not given in this manual, we recommend that you consult your nearest Auto Crane Distributor. Our distributors are stocked with authorized replacement parts and a service department that can solve almost any needed repair.

NOTE: THIS MANUAL SHOULD REMAIN WITH THE CRANE AT ALL TIMES.

The material herein does not imply to cover all maintenance, instructions, operations, or variations pertinent to every possible situation. If additional information is required, please refer to the Auto Crane Company at the following telephone number: 918-438-2760. The information contained in the manual was in effect at the time of printing. Auto Crane Company reserves the right to update this material at any time without prior notice or obligation.

-IMPORTANT-

SAFETY TIPS AND PRECAUTIONS

1. Make certain the vehicle meets minimum chassis requirements. (These requirements do not guarantee unit stability.)
2. Make certain the crane is installed per factory specifications. Contact your local Distributor or the Auto Crane factory if any questions arise.
3. Keep the vehicle in as level a position as possible while loading or unloading.
4. ALWAYS set the vehicle emergency brake before beginning crane operations
5. ALWAYS use outriggers from vehicle to the ground during crane operation. Insure that they are firmly positioned on solid footings.
6. All load ratings are based on crane capacity, NOT unit stability.
7. ALWAYS comply with load chart capacities (centerline of rotation to hoist hook).
8. NEVER OPERATE THE CRANE NEAR ELECTRICAL POWER LINES. Auto Crane Company recommends that a crane never be moved any closer to a power line (including telephone lines) than 20 feet at any point.
9. Keep objects and personnel clear of crane path during operation.
10. Keep hoist cable pulled tight at all times.
11. WARNING NEVER un-reel last wrap of cable from drum.
12. WARNING NEVER wrap cable around load.
13. REMEMBER - in lifting a heavy load, the weight can create enough tipping moment to overturn the vehicle.
14. WARNING NEVER attempt to lift or drag a load from the side- the boom can fall far below its rated capacity.
15. Oil gears as required.
16. Periodic adjustment of hoist worm brake may be required (see automatic safety brake drawing, page4-4.0.0).
17. WARNING NEVER weld, modify, or use unauthorized components on any Auto Crane unit. This will void any warranty or liability. Also failure of the crane may result.
18. An important item which an operator should consider and use properly is the hoist hook. It should be checked on a 30-day basis for distortion or cracks.
19. WARNING NEVER place a chain link on the tip of the hook and try to lift a load with the hoist.
20. WARNING NEVER use a sling bar or anything larger than the hook throat which could prevent the hook from closing with the block, thus negating the safety feature.
21. WARNING In using a safety hook, ALWAYS insure that the hook throat is closed before lifting a load. Proper attention and common sense applied to the use of the hoist hook and various slings will prevent possible damage to material being hoisted and may prevent injury to personnel.
22. WARNING NEVER hold any pendant Select switch on that will negate safe operating conditions.
23. ALWAYS store outriggers before road travel.

OPERATION OF UNIT

1. Make sure this manual has been thoroughly read by all crane operating personnel.
2. A routine inspection of the crane should be mandatory before each operating day. Any defects should be corrected immediately.
3. At a job site the vehicle should be positioned so that the crane can adequately reach the load within the rated capacity (centerline of rotation to hoist hook).
4. Keep the vehicle as level as possible during operation.
5. Engage emergency brake, block wheels, and turn ignition off with transmission left in gear or in park (for automatic transmissions). This is for Auto Crane units requiring only battery operation. For larger Auto Crane units requiring battery and hydraulic operation, engage emergency brake and place gear select in neutral; press clutch and pull PTO knob in gear; release clutch and set throttle control to proper engine speed.
WARNING: DO NOT EXCEED ENGINE SPEED NECESSARY TO MEET PUMP RPM REQUIREMENT - (see hydraulic section) POSSIBLE DAMAGE MAY RESULT.
6. Always use outriggers from the truck to the ground. Be sure these are firm and adequately positioned.
7. Then remove pendant control from cab (on smaller units) and plug into receptacle on crane. Crane is now ready for operation. On Auto Crane's larger units, remove pendant control from guard and unwrap cable from boom. Crane is now ready for operation. **DO NOT OPERATE CRANE WITH CABLE WRAPPED AROUND BOOM LOOPS.**
8. Always boom up before rotating so that the boom will clear the required boom support.
9. When extending the boom always maintain clearance between the boom crown and the traveling block or hoist hook.
10. Always observe safe and practical operation to avoid possible accidents. Refer to Safety Tips and Precautions.
11. After completing lifting operations, return the boom to stowed position on the boom support. Avoid excess pressure on the boom support.
12. Store pendant control on proper location (in cab or on crane).
13. Return outriggers to stowed position. Make sure they are pinned in place or jacklegs are returned to compartment.
14. Check work area for any tools or equipment not stored.
15. Press clutch and disengage PTO. Release throttle control and emergency brake.
16. Report any unusual occurrence during crane operation that may indicate required maintenance or repair.

OPERATION OF HYDRAULIC OUTRIGGERS

1. Prior to operating outriggers, detach crane hook from dead man.
2. Shift crane - outrigger selector valve to "outrigger" position.
3. While operating the outrigger control valves (located on the outrigger cylinders), simultaneously operate the boom-up control switch. This will allow hydraulic system to build pressure.
4. After outriggers are positioned, return crane-outrigger selector valve to "crane" position. Crane is now ready to operate.

MOUNTING AND INSTALLATION 5005H

1. Vehicle should meet minimum GVW rating of 10,500
 2. Make sure compartment or crane mount is adequately reinforced.
 3. A 13 1/2" Dia. hole should be cut out of mounting location (centered with mounting bolts. Ref: ENG 168, page 8-1.0.0 for access of lower ring gear bolts and hydraulic connections.
 4. Mounting bolts (015104 - Screw, Hx. 7/8 N.E. x 5" C5, 4 required) to be torqued to 440 ft. lbs. (dry).
 5. Power conductor (Item 46, 800657-009, Drawing AW-360505, Page 4-1.0.0 and Item 46, Page 4-2.0.0) to be uncoiled from bottom of crane and routed to positive pole on starter solenoid (REF. Drawing AW-023, page 2-2.0.0).
 6. Pressure and return hoses and fittings are not furnished with crane. These items are normally calculated, (length) at installation. Refer to reservoir ass'y, AW480150.
 - A) Return line from crane to reservoir
hose - size 8 (SAE 100 R2 type AT) at desired length.
Fittings - one - 10 JIC female swivel fitting, (reservoir end). One - 8 JIC female swivel fitting (crane end).
 - B) Pressure line from vented relief valve to crane
Hose - size 8 (SAE 100 R2 type AT) at desired length.
Fittings - two - 8 JIC female swivel fittings.
 - C) Suction hose from pump to reservoir.
Hose size 16 (SAE 100 R4) at desired length.
Fittings - one hose adapter - 16 JIC female swivel fitting (pump end).
One - 16 straight adapter (reservoir end). Four hose clamps - 16 (two each end).
 - D) Pressure line from pump to vented relief valve
Hose - size 12 (SAE 100 R2 type AT) at desired length.
Fittings - two - 10 JIC female swivel fittings.
- NOTE: If no pressure received at reservoir, alternate hose connections at pump.
7. When crane is not in operation, a boom support should always be used. Traveling block should be connected to hook loop. See illustration Drawing AW-023, page 2-2.0.0.
 8. Always use cable loops on boom and pendant guard to store pendant assembly.
 9. Crane operation requires 6 G.P.M. at 2350 p.s.i.
 10. IT IS STRONGLY RECOMMENDED THE VEHICLE BE EQUIPPED WITH AN ENGINE SPEED CONTROL AND TACHOMETER.

FIXTURE NO.	FINISH NO.	CHG	REVISIONS		DATE	APP'D
		LTR	DESCRIPTION			

220.0

NOTES:

- SEE PAGE 4 FOR FURTHER INSTRUCTIONS.
- THE INSTALLATION ABOVE SHOWN IN SOLID LINE FORM FOR CLARITY.
- THE PRESSURE AND RETURN HOSES FROM THE RESERVOIR TO THE CRANE SHOULD BE AS LONG AS POSSIBLE TO ALLOW FOR ROTATION.
- AFTER POWER CONDUCTORS ARE INSERTED THROUGH HOLE IN BASE OF CRANE, SEAL ALL AROUND WITH SILICONE RUBBER OR EQUAL TO PREVENT WIRE DAMAGE.

ITEM	D/S	PART NO.	DESCRIPTION
QUANTITY			
LIST OF MATERIAL			
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED:		AUTO CRANE COMPANY MOUNTING AND INSTALLATION 5005H	
ANGLES: 1/2" XX - 45			
FRACTIONAL: 1/16 XXX - 010			
REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING			
TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5-1973			
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.			

7/86
NEXT ASSY

SCALE: ~ SIZE: **B** DRAWING NO: **AW-023** REVISION: 1

FIXTURE NO.	FINISH NO.	CHG	REVISIONS		DATE	APP'D
		LTR	DESCRIPTION			

SECTION A-A

BOTTOM VIEW

Pressure
REDUCER 1/2 - 14 NPT. / 3/8 - 18 NPTF. (750413)
SWIVEL JOINT-8 (750412)

Return
REDUCER 1/2 - 14 NPT. / 3/8 - 18 NPTF. (750413)
SWIVEL JOINT-8 (750412)

TOWARD CAB

QUANTITY	ITEM	D/S	PART NO.	DESCRIPTION
LIST OF MATERIAL				
AUTO CRANE COMPANY				
BASE ASSEMBLY - 5005H				
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED ANGLES - 1/2" XX 1.40 FRACTIONAL ± 1/16 XXX 1.010 REMOVE ALL BURRS AND SHARP EDGES. DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5 - 1975 THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS. DRAWN BY <u>R.D.</u> DATE <u>7/10/80</u> CHK'D BY DATE ENG. BY DATE SCALE <u>B</u> SIZE <u>ENG - 6I</u> WEIGHT				


12/86
NEXT ASS'Y
SHEET 1 OF 1

230.0

RIGWAY S-1000H

AUTO CRANE'S SUGGESTED BOOM SUPPORT

LEAVE 3/4" CLEARANCE ON EACH SIDE OF BOOM

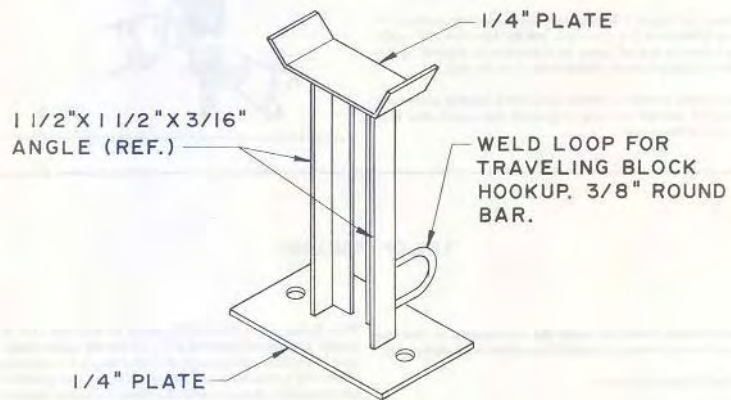

BOOM SUPPORT IS REQUIRED.

AUTO CRANE COMPANY

P.O. BOX 380697 TULSA OKLAHOMA 74158-0697
4707 N. MINGO ROAD 918-836-0463

WIRE LINE LUBRICATION

Lubrication of the wire line serves two important purposes: (1) helps to prevent corrosion; (2) lubricates the cable strands to reduce wear due to flexing and abrasion caused by contact with the sheaves, rollers, and cable on the drum.

PREPARATION:

Remove rust and foreign matter with a wire brush and wipe clean. Be sure cable is dry.

APPLICATION:

Two methods are illustrated in figures 1 and 2. A light weight motor oil may be used, as in figure 1; or a heavier lubricant such as grease gun lubricant, as in figure 2.

Illustrated in figure 1 is one easy and effective method of applying lubrication. Dip the brush into the lubricant and apply. In some cases a rag or piece of sheepskin is dipped in the lubricant and used to swab the lubricant on to the rope.

Another simple method is shown in figure 2. Leather gloves are preferred to canvas because of greater protection and less penetration of the grease.



Fig. 1



Fig. 2

"LIFE OF WIRE LINE"

So many variable factors can cause the deterioration of wire line cable that it is not possible to determine a definite life expectancy.

Some of these factors are:

1. Load being handled.
2. Corrosive conditions.
3. Maintenance of the unit.
 - a. Keep the sheaves turning freely.
 - b. Maintain tension of cable to insure proper spooling.
 - c. Lubricate line (See above).
 - d. Avoid kinks in cable.
 - e. Avoid abrasive action and contact with sharp corners.
4. Frequency of use.

Auto Crane units, up to 5000 pound ratings, use 5/16 inch diameter galvanized preformed 7 x 19 aircraft cable which, when new, has a minimum strength of 9,800 pounds. It is recommended when 2500 pound loads are exceeded to use a two-part line with a traveling block. It can be seen that there is a safety factor of 3.9 to 1 when the cable is new.

Keeping the above factor of safety in mind and knowing the kind of loads that will be handled, the user can determine by inspection of the cable as to when it should be replaced.

Items to look for while inspecting the cables are:

1. Broken strands
2. Kinks and flattened sections.
3. Corrosion and abrasion.

HYDRAULICS - 5005H

VENTED RELIEF VALVE SETTING

REF: See reservoir assembly AW-360250, Page 6-5.0.0, and AW-092, Page 6-6.0.0

1. The crane must receive 6 GPM and 2350 PSI, to assure proper flow, install an in-line flow meter between the crane and the reservoir in the return hose, or confirm pump (360029) speed at 950 RPM. Proper pressure setting can be achieved by removing the pipe plug (P/N 000209, see AW-092) and installing a 0-2500 PSI pressure gauge. This should be done with the PTO disengaged, boom-up cylinder fully retracted, and boom properly supported.
2. Engage PTO and boom-up to 75° (Full extension) and note the pressure reading. If the pressure reading is not 2350 PSI, the vented relief valve needs adjustment (See AW-092, page 6-6.0.0). Loosen the adjustment nut and turn allen head screw to achieve 2350 PSI.
 - A. To increase pressure setting turn allen head screw clockwise
 - B. To decrease pressure setting turn allen head screw counter-clockwise
3. Verify this pressure setting by booming down to 60°, then booming up to full cylinder extension again and the pressure checked for 2350 PSI.
4. Return boom to a properly supported position, disengage PTO, remove pressure gauge and reinstall pipe plug.

AW-093 HYDRAULICS - 5005H

COUNTERBALANCE VALVE ADJUSTMENT

REF: For more hydraulic assembly information see AW-360564, Page 6-1.0.0, or AW-360565, Page 6-2.0.0

1. (See Fig. 1) With PTO disengaged and boom properly supported, remove pipe plug P/N 000209 and install A 0-2500 P.S.I. pressure gauge into tee, P/N 360574.
2. (See Fig. 3) Loosen locking set screw on flow regulator valve and turn adjustment knob all the way counter-clockwise for maximum flow.
3. (See Fig. 4) Remove cap and loosen adjustment nut on relief valve, P/N 360566. Turn allen head adjustment screw all the way clockwise to raise the relief setting to maximum (DO NOT OVER TIGHTEN).
4. Engage PTO (Requirements: pump speed setting 950 R.P.M., 6 G.P.M., 2350 P.S.I. to crane). With no load on boom, boom-up to 75° (Boom-up cylinder fully extended). Boom-down and note the pressure reading. If pressure reading is not 550-600 P.S.I., the counterbalance valve requires adjustment (See Fig. 2).
 - A. To increase the counterbalance setting, loosen adjustment nut, and turn allen head adjustment screw counter-clockwise.
 - B. To reduce counterbalance setting, turn adjustment screw clockwise.
5. Tighten nut on adjustment screw, repeat procedure if needed to obtain proper pressure setting.
6. With boom in properly supported position disengage PTO, remove pressure gauge and re-install pipe plug.


NOTE: If in an emergency situation it becomes necessary to lower the boom without flow being present, the counterbalance adjustment can be turned clockwise until the boom begins to descend. Caution, do not screw in adjustment screw too fast or too far, damage to valve may result.

PRESSURE RELIEF VALVE SETTING

1. (See Fig. 4) With PTO disengaged and boom properly supported remove cap, P/N 330348 from pressure gauge fitting P/N 330176 and install a 0-2500 P.S.I. pressure gauge.
2. Close flow regulator valve by turning adjustment knob all the way clockwise (See Fig. 3). CAUTION- DO NOT OVERTIGHTEN.
3. Engage PTO (Requirements: pump speed setting 950 R.P.M., 6 G.P.M., 2350 P.S.I. to crane). With no load on boom, boom-up to 75° (Boom-up cylinder fully extended). Activate boom-down and note the pressure reading. If the pressure reading is not 750-800 P.S.I. the pressure relief valve requires adjustment.
 - A. With cap removed from allen head adjustment screw, loosen the adjustment nut.
 - B. To increase the pressure relief setting, turn the allen head adjustment screw clockwise.
 - C. To decrease the pressure relief setting, turn the allen head adjustment screw counter-clockwise.
4. Tighten nut on adjustment screw, and re-install cap. Repeat procedure if needed to obtain proper pressure setting. Disengage PTO and remove pressure gauge, reinstall cap.

BOOM DOWN SPEED SETTING

1. (See Fig. 3) Engage PTO (requirements: pump speed setting, 950 R.P.M., 6 G.P.M., 2350 P.S.I. to crane). With no load on boom, boom-up to 75° (Boom-up cylinder fully extended). Activate boom-down and adjust the flow regulator adjustment knob to achieve a boom-down time of 37 seconds from 75° to 0°.
 - A. To increase boom-down speed, turn adjustment knob counter-clockwise.
 - B. To decrease boom-down speed, turn adjustment knob clockwise.
 - C. Use locking set screw on adjustment knob to hold desired position.

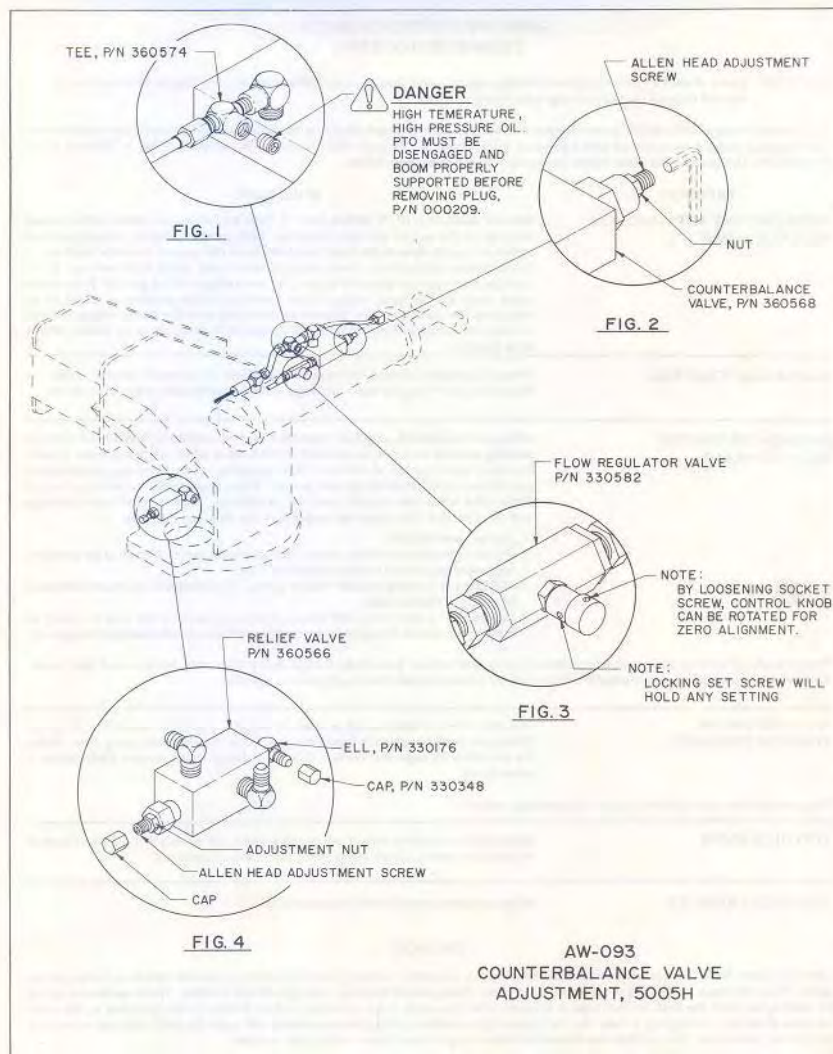

5005H SERIES HYDRAULICS TROUBLESHOOTING

CAUTION: Never check for hydraulic leaks by feeling around hoses, fittings, or any other components. High pressure oil can be injected through the skin causing severe injury, or death.


The hydraulic system of the 5005H power version is electrically operated and requires a minimum of 12v for satisfactory performance. The hydraulic pump is bi-rotational with a pressure relief setting of 2350 p.s.i. (REF). Standard pump speed is 950 R.P.M. (Ref. Pump P/N 360029). This pump is for direct flange mounting only, not to be shaft driven.

PROBLEM	SOLUTION
FLOW PRESENT BUT FUNCTION WILL NOT WORK	Remove valve cover (P/N 360544, Item 15, Page 4-1.0.0) to gain access to the manual override on the end of the valve cartridge. With pump operating, operate pendant switch to supply flow to the crane and twist/pull the manual override knob out. If function does not operate, check pump pressure and relief valve setting. If the function does operate, check for loose wire, low voltage or bad ground. If the above items check out all right, replace valve cartridge. If the problem is traced to no voltage at the valve cartridge, remove pendant and with the switch engaged check for an open circuit with an ohmmeter. If the circuit is open, check for broken wiring or bad switch.
HYDRAULIC "CHATTER"	When a hydraulic function is engaged and causes the crane to "chatter", check for loose wire, low voltage at valve cartridge, low pump pressure, or air in the system.
NO FLOW OR LIMITED FLOW TO CRANE	Check for adequate oil supply in reservoir. Check operation of vented relief valve by pressing manual over-ride on solenoid of relief valve while operating crane. If crane functions, check for 12V at solenoid when operating crane. If voltage present-check solenoid on relief for continuity and ground. If low flow condition continues to exist when relief valve vent manual over ride is operated, remove relief valve cartridge and check for dirt. Other possible causes for a low flow condition are: 1. Engine speed too slow. 2. Blocked pressure hose from pump. This condition can be identified by excessive lugging of engine and rapid overheating of oil. 3. Collapsed or blocked suction hose to pump. This condition is usually identified by pump cavitation noise. 4. Bad pumps - a bad pump will usually have some flow but the flow will drop off rapidly as pressure increases. This condition will cause overheating of the system.
Progressively disconnect fittings at test points to verify existence of flow. Rule: Pumps pump flow only, systems and their load-resistances produce pressure, up to that limit imposed by lowest pressure limiting exposed to pressure.	
NO PRESSURE OR TOO LOW PRESSURE	Check to maintain adequate oil in reservoir (approx. 5 gal.) by means of sight gauge. Make sure pressure gauge is functioning correctly. Possible relief hung open. Check for excessive leakage and correct. Check to insure that pressure limit switch is correctly set.
Progressively test circuit points to determine pressure existence.	
TOO HIGH FLOW	Make sure pump size is correct and pump speed is not too fast (950 R.P.M.). Check or replace flow control. Check components for flow displacements.
TOO HIGH PRESSURE	Make sure pressure relief valve is correctly set.

CAUTION

The Auto Crane 5005H Series cranes are manufactured with a standard overload protection system to prevent structural damage to the crane. When the crane load rating is exceeded, main boom down, extend out, and hoist up will not function. These operations cannot be used again until the load on the crane is reduced. Also, the main boom elevation will be limited in its operation as the crane becomes overload. Attempting to raise the main boom with a load exceeding the crane rating will open the main relief valve resulting in no boom movement. This problem can be resolved by moving the load closer to the crane pedestal.


3410.0

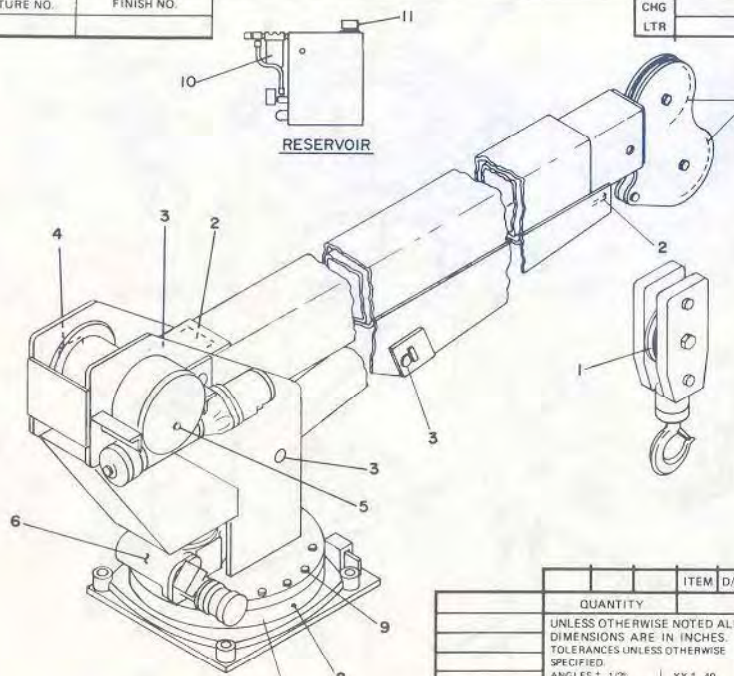FIXTURE NO.	FINISH NO.	CHG	REVISIONS		
		LTR	DESCRIPTION	DATE	APP'D
 RESERVOIR			1. SHEAVE ROLLER BEARINGS: SEALED TYPE. NO LUBE REQUIRED.		
			2. BOOM PADS: IF REPLACED, GREASE UPON INSTALLATION. USE CHASSIS LUBRICANT.		
			3. GREASE ZERK: PIVOT POINTS, LUBE ONCE A WEEK. USE MOBILPLEX EP-2 OR EQUIVALENT (CYLINDER CROSSTUBE @ BOOM) (CYLINDER CROSSTUBE @ PEDESTAL) (BOOM PIVOT)		
			4. HOIST ROLLER BEARINGS: SEALED TYPE. NO LUBE REQUIRED.		
			5. HOIST ACTUATOR: MAINTAIN LUBE AT PLUG. USE EXTREME PRESSURE GEAR LUBE (E.P. 80-90). SPUR GEAR TO USE 30 WT. OIL. REPLACE LUBE EVERY SIX MONTHS.		
			6. ROTATION GEAR BOX: REQUIRES 1-3/4 PINT OF EPO-140. REPLACE EVERY SIX MONTHS.		
			7. RING GEAR: LUBE EVERY 3 MONTHS AT PINION. USE MOBILTAC LL OR EQUIVALENT.		
			8. RING GEAR RACE: LUBE EVERY 3 MONTHS AT ZERK. USE MOBILPLEX EP-2 OR EQUIVALENT.		
			9. BOLTS: RING GEAR - PEDESTAL BASE. REQUIRED TORQUE OF BOLTS IF REPLACED - (150 FT/LBS NON-PLATED, 110 FT/LBS PLATED). HARDENED WASHERS REQUIRED. NOTE: BOLTS SHOULD BE CHECKED PERIODICALLY AND RETIGHTENED TO PROPER TORQUE. THE POSSIBILITY EXISTS THAT DUE TO STRESSES APPLIED TO THE ROTATION SYSTEM, THE BOLTS COULD WORK LOOSE.		
			10. RESERVOIR FILTER: 10 MICRON SPIN ON FILTER REQUIRED. REPLACE EVERY 3 MONTHS.		
	11. HYDRAULIC FLUID: USE DTE-13 OR EQUAL TO KEEP LEVEL AT SIGHT GAUGE. RESERVOIR SHOULD BE FLUSHED AND NEW FLUID ADDED EVERY 2 YEARS OR IF A HYDRAULIC FAILURE OCCURS.				

QUANTITY	ITEM	D/S	PART NO.	DESCRIPTION
	LIST OF MATERIAL			
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED: ANGLES ± 1/2° XX ± .40 FRACTIONAL ± 1/16 XXX ± .010 REMOVE ALL BURRS AND SHARP EDGES. DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5 1973		AUTO CRANE COMPANY		
		LUBRICATION - MAINTENANCE		
		5005H		
		SCALE: SIZE: B DRAWING NO: AW-024 REVISION:		
NEXT ASS'Y		WEIGHT		
		SHEET <u>1</u> OF <u>1</u>		

THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.

PIDDGWAY 1000H

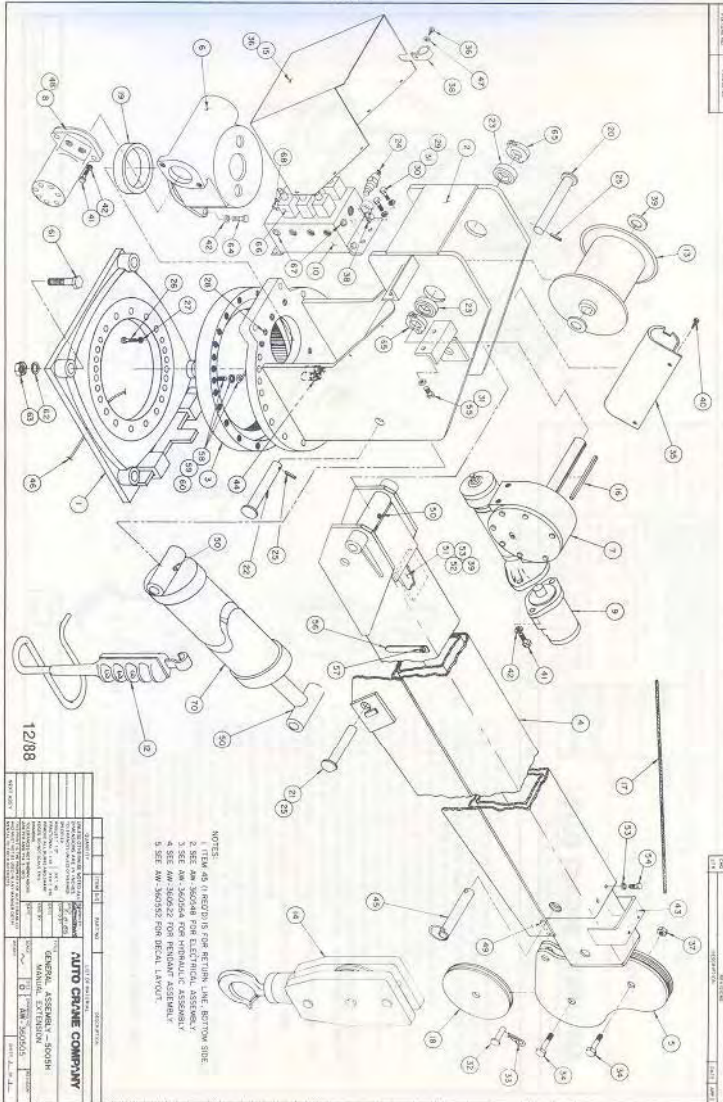


4-1.0.0

GENERAL ASSEMBLY - 5005H - AW-360505 MANUAL EXTENSION

ITEM	QTY	PART NO	DESCRIPTION
1	1	360536	BASE PLATE ASSEMBLY
2	1	360530	PEDESTAL WELDMENT ASSEMBLY
3	1	480023	BEARING, ROTATION
4	1	360515	BOOM, LOWER
5	1	360525	BOOM, INNER
6	1	480028	GEAR BOX, ROTATION
7	1	360555	ACTUATOR, HOIST
8	1	480027	MOTOR, HYD. (ROTATION)
9	1	360199	MOTOR, HYD. (HOIST)
10	1	480182	MANIFOLD, CARTRIDGE
11	1	360552	DECAL LAYOUT
12	1	360522	PENDANT
13	1	360543	DRUM, HOIST
14	1	360602	BLOCK, TRAVELING
15	1	360544	COVER, VALVE
16	1	360557	KEY, 5/16 X 8-1/8" LG.
17	1	360155	CABLE, HOIST 5/16"
18	2	360205	SHEAVE ASSEMBLY
19	1	360162	RING, ECCENTRIC
20	1	360541	PIN, PEDESTAL/BOOM
21	1	360117	PIN, BOOM/CYLINDER
22	1	360539	PIN, PEDESTAL/CYLINDER
23	2	400500	BEARING
24	1	480183	CARTRIDGE, FLOW REGULATOR (SEAL KIT 480183-001)
25	3	360123	PIN, SPRING
26	38	012198	SCREW, HX. HD. 5/8 NC X 1-3/4 G8
27	38	023902	WASHER, FL 5/8 HARDENED
28	4	006205	SCREW, SC. HD. 5/8 NC X 1-1/4 G8
29	4	008701	SCREW, HX. HD. 3/8 NC X 1" LG
30	4	017100	NUT, HX 3/8 NC CP
31	8	021100	WASHER, SPLK 3/8
32	1	360126	PIN, CROWN
33	1	360124	PIN, HITCH
34	2	013506	SCREW, HX. HD. 5/8 NF X 2-1/4 G5
35	1	634000	GUARD, PENDANT
36	6	002608	SCREW, 1/4-20 x 3/4 S.T. TYPE F
37	2	018300	NUT, HX-LK 5/8 NF
38	2	480024	MOUNT, PENDANT RETAINER
39	2	480033	SHIM, LARGE
40	2	002615	SCREW, 1/4-20 x 3/8 S.T. TYPE F
41	4	012197	SCREW, SC. HD. 1/2 NC X 1-1/2 G5
42	8	012500	WASHER, SPLK 1/2
43	1	360545	RETAINER, INNER BOOM
44	2	360054	ADAPTER, ST. 1/2 NPT / 3/4 JIC
45	1	360112	PIN, MANUAL BOOM
46	1	800657-009	CONDUCTOR, POWER
47	1	020901	WASHER, FL 5/16
48	1	480019	GASKET, MOTOR
49	1	360167	PAD, RETAINER - LOWER
50	3	239000	ZERK, GREASE
51	1	480032	PAD, BOOM

GENERAL ASSEMBLY - 5005H - AW-360505 MANUAL EXTENSION

ITEM	QTY.	PART NO.	DESCRIPTION
52	4	005406	SCREW, HX.HD. 1/4 NF X 1/2" LG CP
53	6	020200	WASHER, SPLK 1/4
54	2	005901	SCREW, HX.HD. 1/4 NC X 1/2" LG
55	4	008601	SCREW, HX.HD. 3/8 NC X 7/8" LG G5
56	2	360038	INDICATOR, ANGLE
57	2	016300	NUT, HX-LK 1/4 NC
58	1	360207	RETAINER, ECCENTRIC RING
59	1	020600	WASHER, SPLK 5/16
60	1	007402	SCREW, HX.HD. 5/16 NC X 5/8" LG G5
61	4	015104	SCREW, HX. 7/8 NF X 5" G5
62	4	022200	LOCKWASHER, 7/8"
63	4	018900	NUT, HX. 7/8 NF
64	4	011608	SCREW, HX. HD. 1/2 NC X 2" G5
65	2	330468	COLLAR, SPLIT-LOCK
66	6	480184	VALVE, CARTRIDGE
67	3	000109	PLUG, PIPE 3/8-18
68	2	330072	PLUG, HX.HD. 7/8-14 "O"-RING
69	1	360031	KIT, SHIP LOOSE
70	1	360158	CYLINDER BOOM UP (COMPLETE)
	1	360158-001	CASE ASSEMBLY
	1	360158-002	SHAFT ASSEMBLY
	1	360158-003	HEAD GLAND
	1	360158-004	PISTON
	1	330604	SEAL KIT

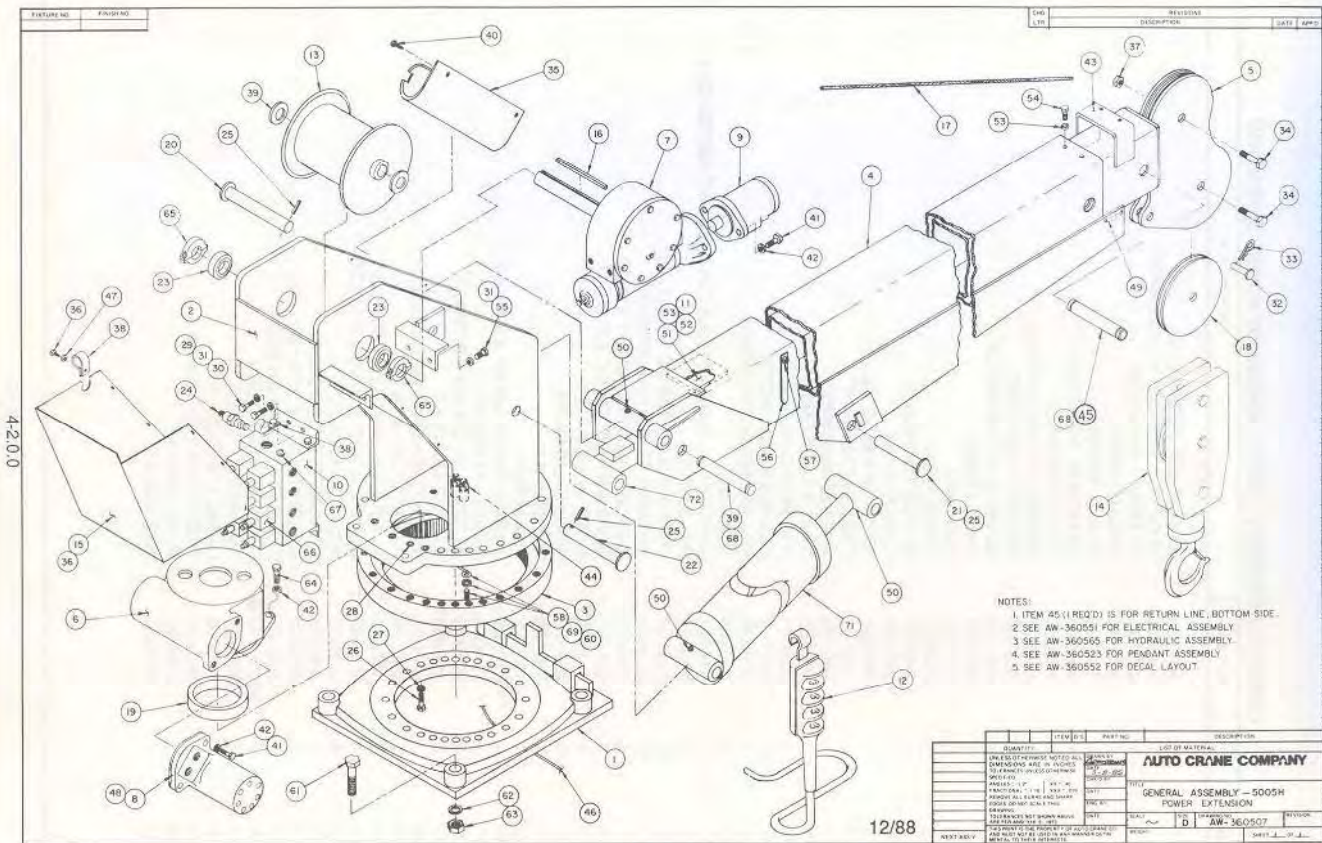

12/88

GENERAL ASSEMBLY - 5005H - AW-360507 POWER EXTENSION

ITEM	QTY.	PART NO.	DESCRIPTION
1	1	360536	BASE PLATE ASSEMBLY
2	1	360530	PEDESTAL WELDMENT ASSEMBLY
3	1	480023	BEARING, ROTATION
4	1	360515	BOOM, LOWER
5	1	360528	BOOM, INNER
6	1	480028	GEAR BOX, ROTATION
7	1	360555	ACTUATOR,HOIST
8	1	480027	MOTOR, HYD.(ROTATION)
9	1	360199	MOTOR, HYD.(HOIST)
10	1	480182	MANIFOLD, CARTRIDGE
11	2	480033	SHIM, LARGE
12	1	360523	PENDANT
13	1	360543	DRUM, HOIST
14	1	360602	BLOCK, TRAVELING
15	1	360544	COVER, VALVE
16	1	360557	KEY, 5/16 X 8-1/8"LG.
17	1	360155	CABLE, HOIST 5/16"
18	2	360205	SHEAVE ASSEMBLY
19	1	360162	RING, ECCENTRIC
20	1	360541	PIN, PEDESTAL/BOOM
21	1	360117	PIN, BOOM/CYLINDER
22	1	360539	PIN, PEDESTAL/CYLINDER
23	2	400500	BEARING
24	1	480183	CARTRIDGE, FLOW REGULATOR (SEAL KIT 480183-001)
25	3	360123	PIN, SPRING
26	38	012198	SCREW, HX.HD. 5/8 NC X 1-3/4 G8
27	38	023902	WASHER, FL. 5/8 HARDENED
28	4	006205	SCREW, SC.HD. 5/8 NC X 1-1/4 G8
29	4	008701	SCREW,HX.HD. 3/8 NC X 1"LG
30	4	017100	NUT, HX. 3/8 NC CP
31	8	021100	WASHER, SPLK 3/8
32	1	360126	PIN, CROWN
33	1	360124	PIN, HITCH
34	2	013506	SCREW, HX.HD. 5/8 NF X 2-1/4 G5
35	1	634000	GUARD, PENDANT
36	6	002608	SCREW, 1/4-20 X 3/4 S.T. TYPE F
37	2	018300	NUT, HX-LK 5/8 NF
38	2	480024	MOUNT, PENDANT RETAINER
39	1	360120	PIN, EXT. CYL. LOWER
40	2	002615	SCREW, 1/4-20 X 3/8 S.T. TYPE F
41	4	012197	SCREW, SC.HD. 1/2 NC X 1-1/2 G5
42	8	012500	WASHER, SPLK 1/2
43	1	360545	RETAINER, INNER BOOM
44	2	360054	ADAPTER, ST. 1/2 NPT / 3/4 JIC
45	1	360121	PIN, EXT. CYL. UPPER BOOM
46	1	800657-009	CONDUCTOR, POWER
47	1	020901	WASHER, FL. 5/16
48	1	480019	GASKET, MOTOR
49	1	360167	PAD, RETAINER - LOWER
50	3	239000	ZERK, GREASE
51	1	480032	PAD, BOOM

GENERAL ASSEMBLY - 5005H - AW-360507 POWER EXTENSION

ITEM	QTY	PART NO	DESCRIPTION
52	4	005406	SCREW, HX.HD. 1/4 NF X 1/2" LG CP
53	6	020200	WASHER, SPLK 1/4
54	2	005901	SCREW, HX.HD. 1/4 NC X 1/2" LG
55	4	008601	SCREW, HX.HD. 3/8 NC X 7/8" LG G5
56	2	360038	INDICATOR, ANGLE
57	2	016300	NUT, HX-LK 1/4 NC
58	1	360207	RETAINER, ECCENTRIC RING
59	1	020600	WASHER, SPLK 5/16
60	1	007402	SCREW, HX.HD 5/16 NC X 5/8" LG G5
61	4	015104	SCREW, HX. 7/8 NF X 5" G5
62	4	022200	LOCKWASHER, 7/8"
63	4	018900	NUT, HX. 7/8 NF
64	4	011608	SCREW, HX.HD. 1/2 NC X 2" G5
65	2	330468	COLLAR, SPLIT-LOCK
66	8	480184	VALVE, CARTRIDGE
67	1	000109	PLUG, PIPE 3/8-18
68	4	360122	RING, RETAINING
69	1	360031	KIT, SHIP LOOSE
70	1	360552	DECAL LAYOUT
71	1	360158	CYLINDER, BOOM UP (COMPLETE)
	1	360158-001	CASE ASSEMBLY
	1	360158-002	SHAFT ASSEMBLY
	1	360158-003	HEAD GLAND
	1	360158-004	PISTON
	1	330604	SEAL KIT
72	1	360152	CYLINDER, BOOM EXT. (COMPLETE)
	1	360152-001	CASE ASSEMBLY
	1	360152-002	SHAFT ASSEMBLY
	1	360152-003	HEAD GLAND
	1	360152-004	PISTON
	1	330603	SEAL KIT



12R8


PART NO.		DESCRIPTION	
12R8	1	ACTUATOR HOIST	1
12R8	2	ACTUATOR HOIST	1
12R8	3	ACTUATOR HOIST	1
12R8	4	ACTUATOR HOIST	1
12R8	5	ACTUATOR HOIST	1
12R8	6	ACTUATOR HOIST	1
12R8	7	ACTUATOR HOIST	1
12R8	8	ACTUATOR HOIST	1
12R8	9	ACTUATOR HOIST	1
12R8	10	ACTUATOR HOIST	1
12R8	11	ACTUATOR HOIST	1
12R8	12	ACTUATOR HOIST	1
12R8	13	ACTUATOR HOIST	1
12R8	14	ACTUATOR HOIST	1
12R8	15	ACTUATOR HOIST	1
12R8	16	ACTUATOR HOIST	1
12R8	17	ACTUATOR HOIST	1
12R8	18	ACTUATOR HOIST	1
12R8	19	ACTUATOR HOIST	1
12R8	20	ACTUATOR HOIST	1
12R8	21	ACTUATOR HOIST	1
12R8	22	ACTUATOR HOIST	1
12R8	23	ACTUATOR HOIST	1
12R8	24	ACTUATOR HOIST	1
12R8	25	ACTUATOR HOIST	1
12R8	26	ACTUATOR HOIST	1
12R8	27	ACTUATOR HOIST	1
12R8	28	ACTUATOR HOIST	1
12R8	29	ACTUATOR HOIST	1
12R8	30	ACTUATOR HOIST	1
12R8	31	ACTUATOR HOIST	1
12R8	32	ACTUATOR HOIST	1
12R8	33	ACTUATOR HOIST	1
12R8	34	ACTUATOR HOIST	1
12R8	35	ACTUATOR HOIST	1
12R8	36	ACTUATOR HOIST	1
12R8	37	ACTUATOR HOIST	1


HOIST ACTUATOR - AW-360555

ITEM	QTY.	PART NO.	DESCRIPTION
1	1	360450	COVER, WORM BRAKE
2	1	360359	GASKET
3	1	360368	SPRING
4	1	360367	SPRING, FLAT
5	1	360342	PLATE RETAINER
6	1	360364	PLATE, THRUST
7	1	360331	CAM PLATE
8	2	360345	BALL, BRAKE
9	1	360339	HUB-BRAKE
10	1	360336	HOUSING, BRAKE
11	2	360358	GASKET
12	2	360346	BEARING
13	1	360356	SHAFT-OUTPUT
14	1	480094	KEY 5/16 (REF. FOR DRUM)
15	2	360340	KEY
16	1	360360	FITTING-RELIEF
17	1	360361	REDUCER
18	1	360344	WORM-R.H.
19	1	360365	OIL SEAL
20	1	360330	ADAPTER
21	1	360332	COUPLING
22	1	360363	SPIROL PIN
23	1	360451	HOUSING - GEAR
24	2	360362	PIPE PLUG
25	1	360348	BUSHING
26	1	360369	THRUST WASHER
27	1	360457	GEAR/HUB ASSEMBLY R.H. 46:1
28	1	360347	BUSHING
29	1	360357	GASKET
30	1	360333	COVER
31	7	360350	CAPSCREW 1/4 - 20 NC X 3/4 HX. HD. GR.5
32	1	360452	CAPSCREW 1/4 - 20 NC X 3/4 HX. HD. NYLOK HVY PATCH GR.5
33	2	010202	CAPSCREW 1/2 - 13 NC X 1 HX. HD.
34	4	360352	CAPSCREW 1/4 - 20 NC X 1 3/4 SOC. HD. LOC.-WEL
35	4	360454	CAPSCREW 1/4 - 20 NC X 7/8 SOC. HD. BUTTON GR.5
36	2	360453	CAPSCREW 1/4 - 20 NC X 1 HX. HD. GR.5 ALL THRD. NYLOC HVY. PATCH
37	1	360456	CAPSCREW 3/8 - 16 NC X 1 1/2 HX. HD. ALL THRD. GR.5
38	4	005604	CAPSCREW 1/4 - 20 NC X 1 HX. HD. GR.5
39	4	360354	LOCKWASHER 1/4 MED. SECT. C.P.
40	1	360353	NUT 3/8 - 16 NC HX. JAM
41	1	360371	SEAL
42	2	360455	WASHER - FLAT 1/4 ALUM.
43	1	360349	COVER - HYD. ADAPTER
44	2	360341	KEY
45	1	360366	OIL SEAL
46	1	480289	SEAL AND GASKET KIT

AUTOMATIC SAFETY BRAKE ASSEMBLY (OIL COOLED) HOIST

1. Winch has right hand worm and gear and spools over drum; use number one slots for brake balls.
2. Install brake hub on winch worm with key.
3. Assemble balls in cam using hard grease to hold balls in place.
4. Install cam and balls, fitting balls in slots on hub.
5. Install brake disc.
6. Install retainer.
7. Install flat spring in brake housing cover (arch down).
8. Install brake housing cover, fitting pins in slots on spring and holes in retainer.
9. Test brake by shifting winch to UP then DOWN to see if brake is working in proper rotation. If not, remove brake and locate brake balls in opposite set of slots.
10. Adjust to suit by tightening or loosening screw on outside of cover. When proper adjustment is obtained, secure screw with jam nut.

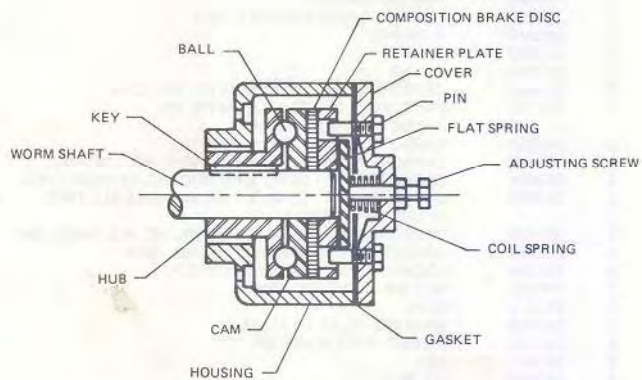

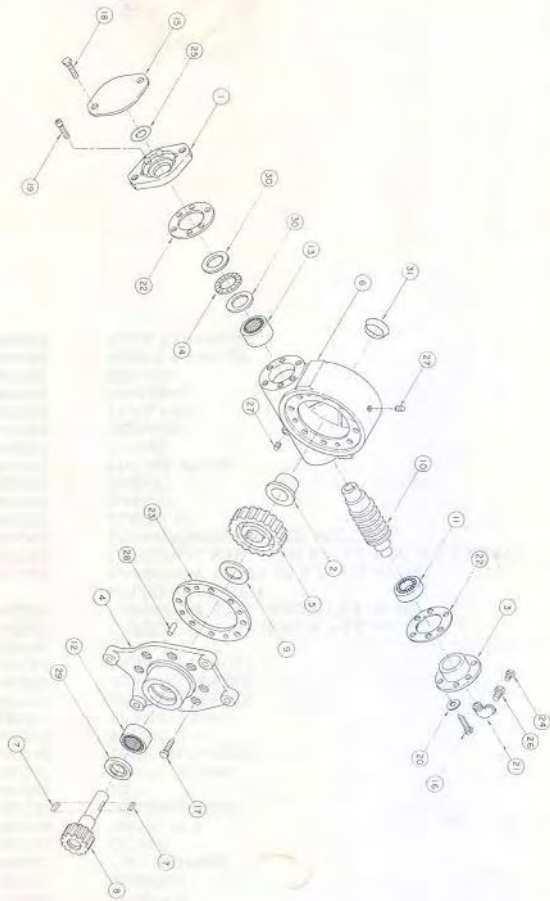


12/86

PARTS LIST		QUANTITY		DESCRIPTION	
1	1	1	1	AUTO CRANE COMPANY	
2	1	1	1	GEAR BOX, ROTATION	
3	1	1	1	GEAR BOX, ROTATION	
4	1	1	1	GEAR BOX, ROTATION	
5	1	1	1	GEAR BOX, ROTATION	
6	1	1	1	GEAR BOX, ROTATION	
7	1	1	1	GEAR BOX, ROTATION	
8	1	1	1	GEAR BOX, ROTATION	
9	1	1	1	GEAR BOX, ROTATION	
10	1	1	1	GEAR BOX, ROTATION	
11	1	1	1	GEAR BOX, ROTATION	
12	1	1	1	GEAR BOX, ROTATION	
13	1	1	1	GEAR BOX, ROTATION	
14	1	1	1	GEAR BOX, ROTATION	
15	1	1	1	GEAR BOX, ROTATION	
16	1	1	1	GEAR BOX, ROTATION	
17	1	1	1	GEAR BOX, ROTATION	
18	1	1	1	GEAR BOX, ROTATION	
19	1	1	1	GEAR BOX, ROTATION	
20	1	1	1	GEAR BOX, ROTATION	
21	1	1	1	GEAR BOX, ROTATION	
22	1	1	1	GEAR BOX, ROTATION	
23	1	1	1	GEAR BOX, ROTATION	
24	1	1	1	GEAR BOX, ROTATION	
25	1	1	1	GEAR BOX, ROTATION	
26	1	1	1	GEAR BOX, ROTATION	
27	1	1	1	GEAR BOX, ROTATION	
28	1	1	1	GEAR BOX, ROTATION	
29	1	1	1	GEAR BOX, ROTATION	
30	1	1	1	GEAR BOX, ROTATION	
31	1	1	1	GEAR BOX, ROTATION	
32	1	1	1	GEAR BOX, ROTATION	
33	1	1	1	GEAR BOX, ROTATION	
34	1	1	1	GEAR BOX, ROTATION	
35	1	1	1	GEAR BOX, ROTATION	

GEAR BOX, ROTATION AW-480028


ITEM	QTY.	PART NO.	DESCRIPTION
1	1	480240	ADAPTER
2	1	480241	BUSHING
3	1	480242	CAP, BEARING
4	1	480243	COVER
5	1	480244	GEAR - R.H.
6	1	480237	HOUSING-GEAR
7	2	480246	KEY
8	1	480247	SHAFT-OUTPUT
9	1	480248	WASHER-THRUST
10	1	480249	WORM, R.H.
11	1	480251	BEARING-BALL
12	1	480252	BEARING-NEEDLE
13	1	480253	BEARING-NEEDLE
14	1	480254	BEARING-THRUST
15	1	480255	COVER
16	6	007400	CAPSCREW, 5/16 - 18 NC X 1" LG. HX. HD.
17	8	480238	CAPSCREW, 5/16 - 18 NC X 1 1/4 LG. HX. NYLOC HVY PATCH
18	2	011508	CAPSCREW, 1/2 - 13 NC X 3/4 LG. HX. HD.
19	6	480256	CAPSCREW, 5/16 - 18 NC X 1" LG. SOC. HD. LOC.-WEL
20	6	480258	LOCKWASHER, 5/16 MED. SECT, C.P.
21	1	480259	ELBOW, 90°
22	2	480260	GASKET
23	1	480250	GASKET
24	1	480262	FITTING, RELIEF
25	1	480239	O-RING
26	1	480263	REDUCER
27	2	480264	PLUG, PIPE
28	4	480265	PIN-DOWEL
29	1	480266	SEAL-OIL
30	2	480268	WASHER-THRUST
31	1	480269	PLUG, EXPANSION

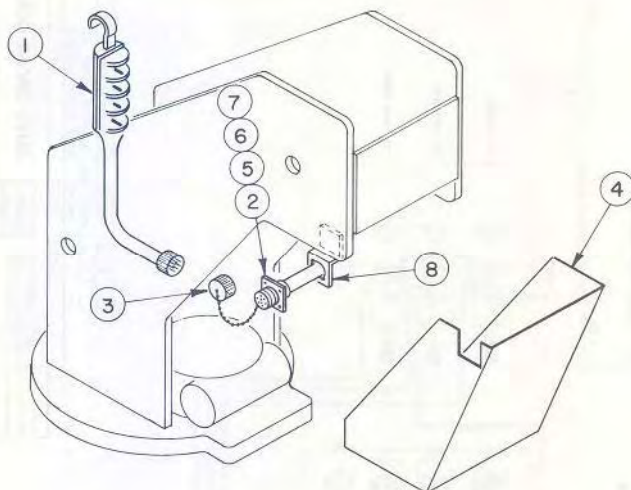

<u>ITEM</u>	<u>QTY.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	1	480400	PENDANT (3 FUNCTION)
	1	480800	PENDANT (4 FUNCTION)
2	1	480802	RECEPTACLE ASSEMBLY
3	1	300413	CAP RECEPTACLE
4	1	480403	VALVE COVER
5	2	000404	SCREW #6-32 X 5/8"
6	2	019600	WASHER SP. LK. #6
7	2	015400	NUT HX. #6-32
8	1	480801	BRACKET

AW-091, GENERAL ASSEMBLY 5005H
(REMOVABLE PENDANT)

5-1.0.0

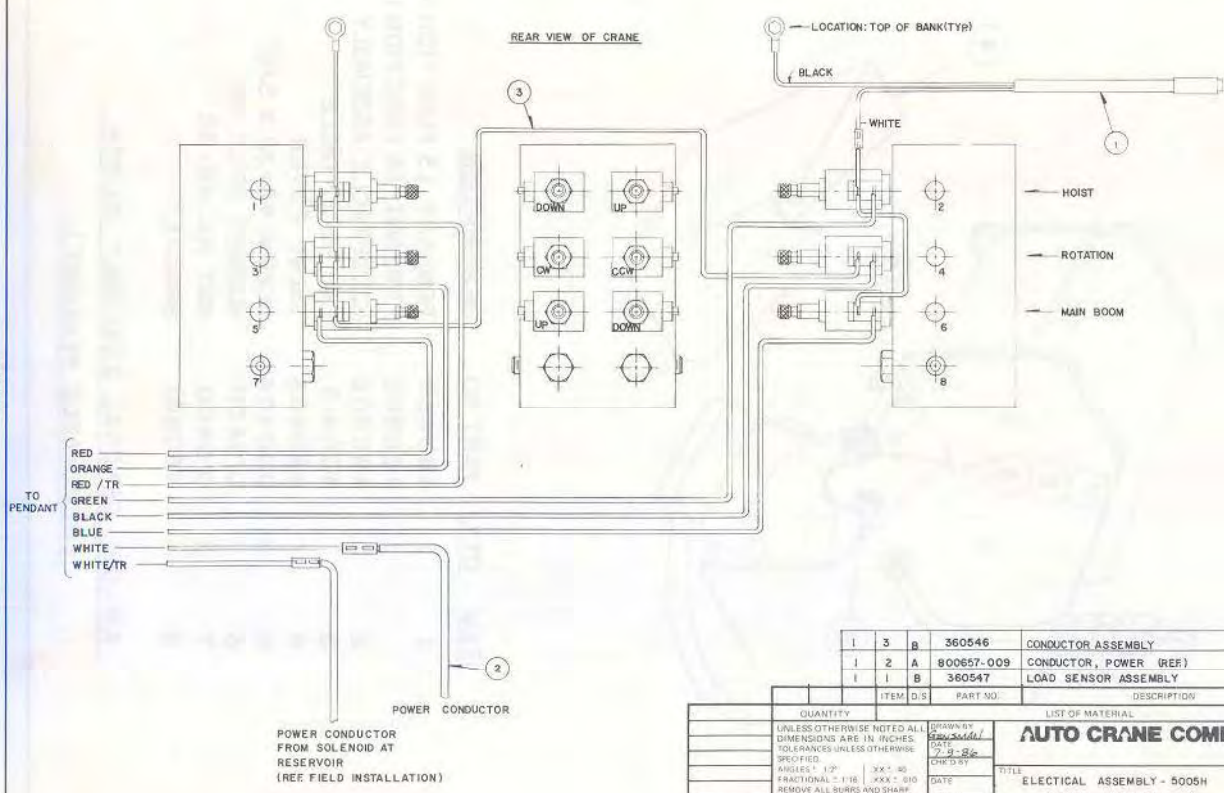


12/86

1	3	B	360546	CONDUCTOR ASSEMBLY
1	2	A	800557-009	CONDUCTOR, POWER (REF)
1	1	B	360547	LOAD SENSOR ASSEMBLY
	ITEM	D.S.	PART NO.	DESCRIPTION

QUANTITY		DRAWN BY		LIST OF MATERIAL	
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED:		DATE		TITLE	
FRACTIONAL ± 1/16		7-9-86		ELECTICAL ASSEMBLY - 5005H	
ANGLES ± 1°		DATE		MANUAL EXTENSION	
XXX ± .010		DATE		REVISION	
REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING.		DATE		SCALE	
TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5-1973		DATE		SIZE	
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.		DATE		DRAWING NO.	
NEXT ASSY		DATE		AW-360548	
		DATE		WEIGHT	
		DATE		SHEET 1 OF 1	

5200

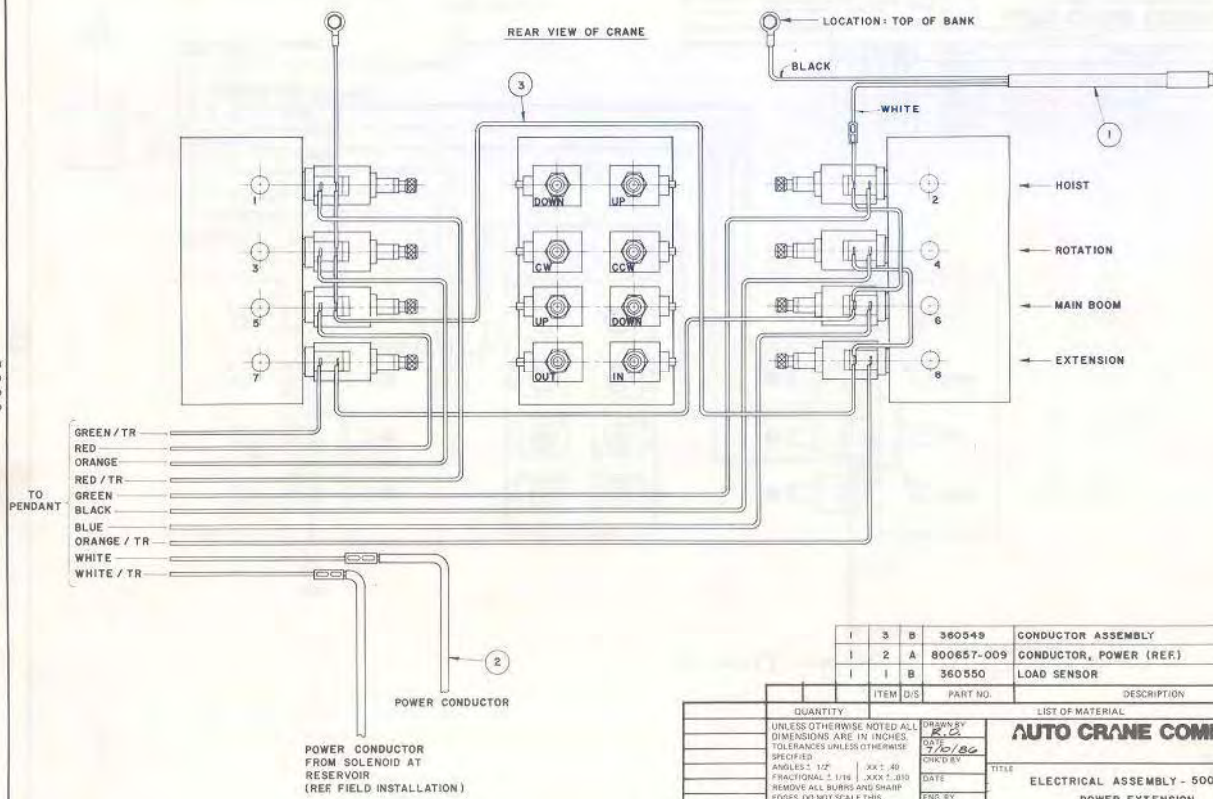


	I	3	B	360549	CONDUCTOR ASSEMBLY
	I	2	A	800657-009	CONDUCTOR, POWER (REF.)
	I	1	B	360550	LOAD SENSOR
	ITEM	D/S	PART NO.		DESCRIPTION
QUANTITY					LIST OF MATERIAL
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED: ANGLES: 1/2" .XXX .40 FRACTIONAL: 1/16 .XXX .010 REMOVE ALL BURRS AND SHARP EDGES. DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5, 1993.					DRAWN BY <u>R.G.</u> DATE <u>7/10/88</u> CHK'D BY <u> </u> DATE <u> </u> END BY <u> </u>
NEXT ASSY					SCALE <u>2</u> SIZE <u>C</u> DRAWING NO. <u>AW-360551</u> REVISION <u> </u>
THIS PRINT IS THE PROPERTY OF AUTO DATE CO. IT MUST NOT BE LOANED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.					WRIGHT <u> </u> SHEET <u>1</u> OF <u>1</u>

12/86

BY CORDON & CO. 11/86/11

5-3-0.0

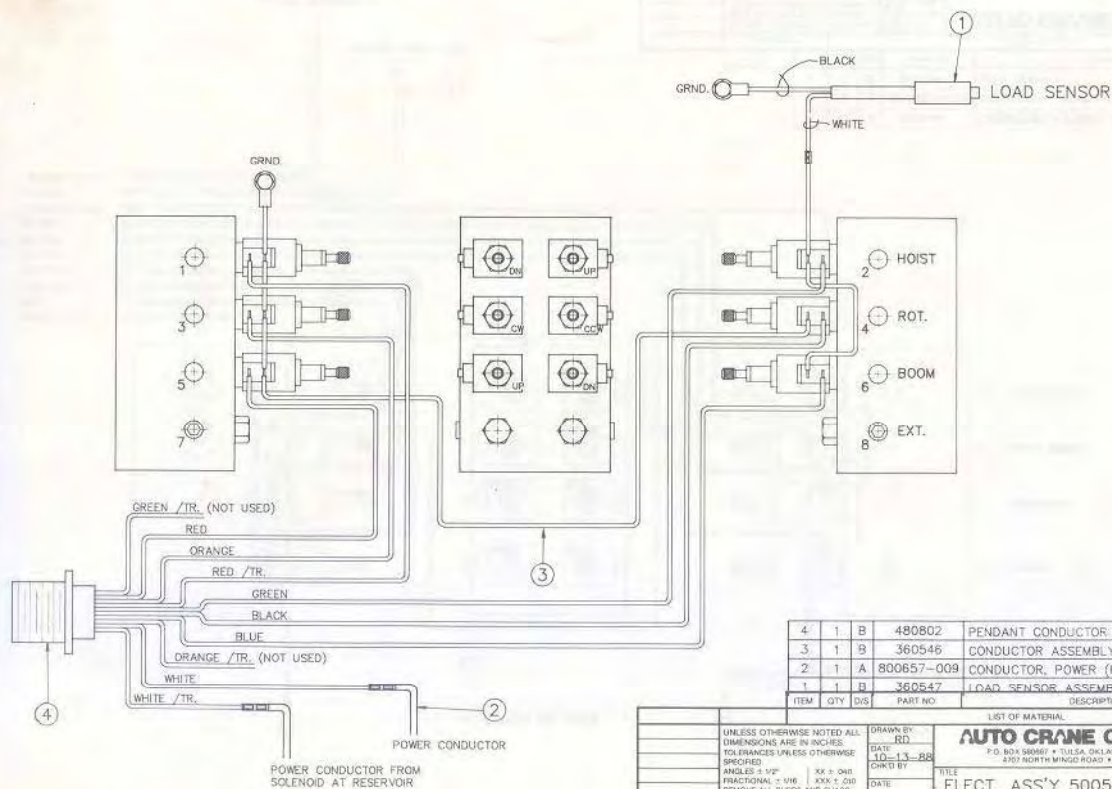

ITEM	QTY	DIV	PART NO	DESCRIPTION
4	1	B	480802	PENDANT CONDUCTOR ASS'Y
3	1	B	360546	CONDUCTOR ASSEMBLY
2	1	A	800657-009	CONDUCTOR, POWER (REF.)
1	1	B	360547	LOAD SENSOR ASSEMBLY

LIST OF MATERIAL

AUTO CRANE COMPANY
P.O. BOX 98087 • TULSA, OKLAHOMA 74158-0887
2707 NORTH MINGO ROAD • 918-436-0463

TITLE
ELECT. ASS'Y 5005H MAN. EXT.
(WITH REMOVABLE PENDANT)

SCALE 1" = 1' DRAWING NO. C LAW-360548-100 REVISION

UNLESS OTHERWISE NOTED ALL
DIMENSIONS ARE IN INCHES
TOLERANCES UNLESS OTHERWISE
SPECIFIED
ANGLES ± 1°
FRACTIONAL ± 1/16
XXX ± .010
REMOVE ALL BLURS AND SHARP
EDGES. DO NOT SCALE THIS
DRAWING.
TOLERANCES NOT SHOWN ABOVE
ARE PER ANSI Y14.5 1973


DRAWN BY
RD
DATE
10-13-88
CHECKED BY
DATE
ENG. BY
DATE

THIS PRINT IS THE PROPERTY OF AUTO CRANE CO.
AND MUST NOT BE USED IN ANY MANNER DETRI-
MENTAL TO THEIR INTERESTS

WEIGHT
SHEET 1 OF 1

CHG	DESCRIPTION	DATE	APP'D
LTR	REVISIONS		

S-4.0.0

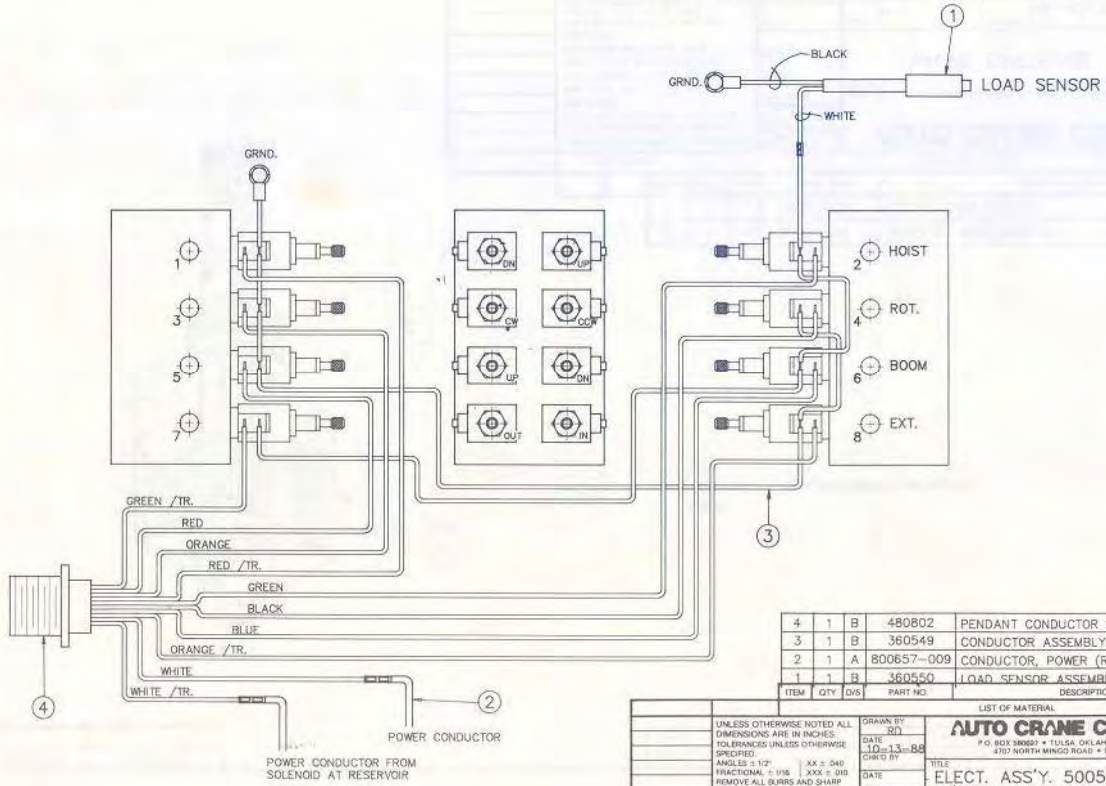

4	1	B	480802	PENDANT CONDUCTOR ASS'Y
3	1	B	360549	CONDUCTOR ASSEMBLY
2	1	A	800657-009	CONDUCTOR, POWER (REF.)
1	1	B	360550	LOAD SENSOR ASSEMBLY

ITEM	QTY	DVS	PART NO.	DESCRIPTION
LIST OF MATERIAL				
AUTO CRANE COMPANY P.O. BOX 38087 • TULSA, OKLAHOMA 74158-087 4707 NORTH WING ROAD • 918-836-0463				
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED: ANGLES ± 1/2°; FRACTIONAL ± 1/16; DECIMAL ± .010. REMOVE ALL BURRS AND SHARP EDGES. DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5-1973. THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.				
DRAWN BY		SD		
DATE		10-13-88		
CHECKED BY				
DATE				
ENG BY				
DATE				
SCALE				
SIZE		C		
DRAWING NO.		AW-360551-100		
WEIGHT				
REVISION				
SHEET		1 OF 1		

CHG	DESCRIPTION	DATE	APP'D
LTR	REVISIONS		



FIXTURE NO.	FINISH NO.	CHG	REVISIONS			DATE	APPRO
		LTR	DESCRIPTION				

NOTE:
FOR SEAL KIT, ORDER PART NO. 480184-001

2	1	-	480186	SPOOL ASSEMBLY
1	1	-	480185	COIL, CARTRIDGE
	ITEM	QTY	D/S	PART NO.
				DESCRIPTION

QUANTITY UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED: ANGLES ± 1/2° XX ± .40 FRACTIONAL ± 1/16 XXX ± .010 REMOVE ALL BURRS AND SHARP EDGES. DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5-1983. THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.	LIST OF MATERIAL AUTO CRANE COMPANY TITLE: VALVE CARTRIDGE SCALE: ~ SIZE: B DRAWING NO: AW-480184 REVISION: WEIGHT: SHEET 1 OF 1
--	--

NEXT ASS'Y

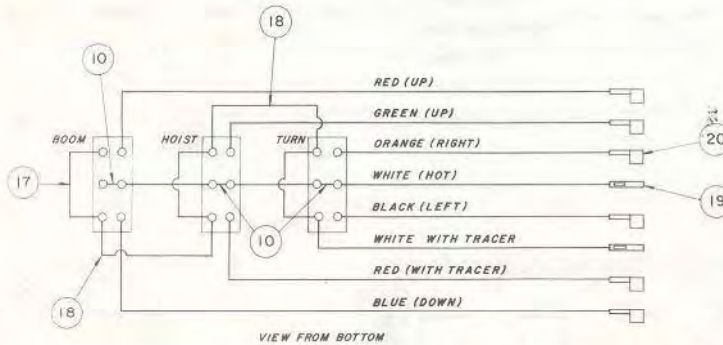
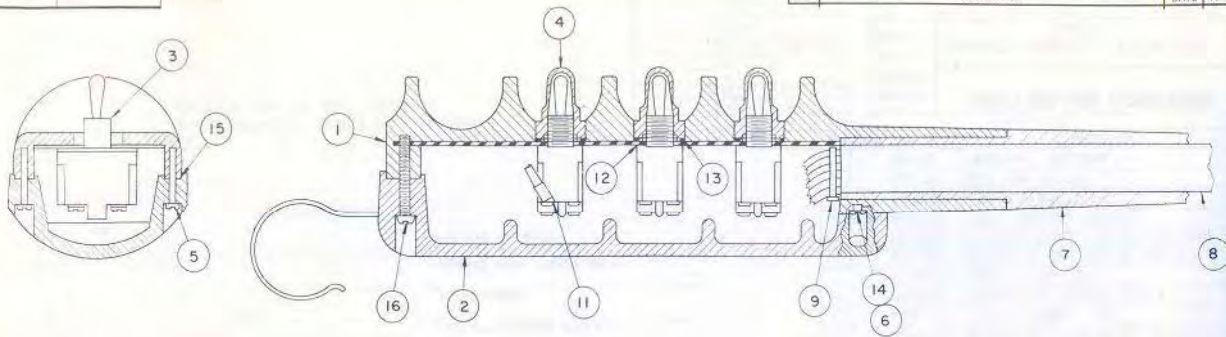


* NOTE:
WHEN ORDERING ITEM 8 (P/N 360081)
ITEMS 19 AND 20 ARE INCLUDED.

20	6	000405	TERMINAL, FLAG (REF) *
19	2	001102	SPLICE, BUTT (REF) *
18	2	622346-002	CONDUCTOR ASS'Y 3 3/8" LG.
17	3	622346-001	CONDUCTOR ASS'Y 2 1/8" LG.
16	1	004700	SCREW, SLT. PAN HD. S.T.#8 X 1 1/2"
15	21"	800580	3/4" WIDTH OKONITE RUBBER TAPE
14	4	019700	WASHER, SPLIT LOCK#8 PLATED
13	3	642100	O-RING
12	3	675271	NUT
11	22	000101	TERMINALS T & B
10	3	636600	JUMPER
9	2	634401	TY-RAP CABLE TIE
8	1	360281	CONDUCTOR CABLE (23') *
7	1	633801	CABLE ADAPTER
6	2	005101	SCREW, S.T.- SLT. PAN HD.#8 X 1 1/4
5	10	005001	SCREW, S.T.- SLT. PAN HD.#8 X 3/4
4	3	640302	BOOT, TOGGLE SWITCH
3	3	634200	TOGGLE SWITCH
2	1	631700	BOTTOM COVER
1	1	631602	PENDANT HOUSING

ITEM	QTY	PART NO.	DESCRIPTION
QUANTITY			
LIST OF MATERIAL			
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED:			
ANGLES: 1/2" .XXX .40			
FRACTIONAL 1/16 .XXX .40			
REMOVE ALL BURRS AND SHARP EDGES. DO NOT SCALE THIS DRAWING.			
TOLERANCES NOT SHOWN ABOVE ARE PER AND Y&S, INC.			
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.			
NEXT ASSY			
DRAWN BY: DATE: 7-1-86			
CHECKED BY: DATE: 7-1-86			
TITLE: PENDANT ASSEMBLY 3-FUNCTION 5005H			
SCALE: 1" = 1" SIZE: C DRAWING NO: AW-360522 REVISION: 1			
WEIGHT: SHEET 1 OF 1			

5-7-0.0

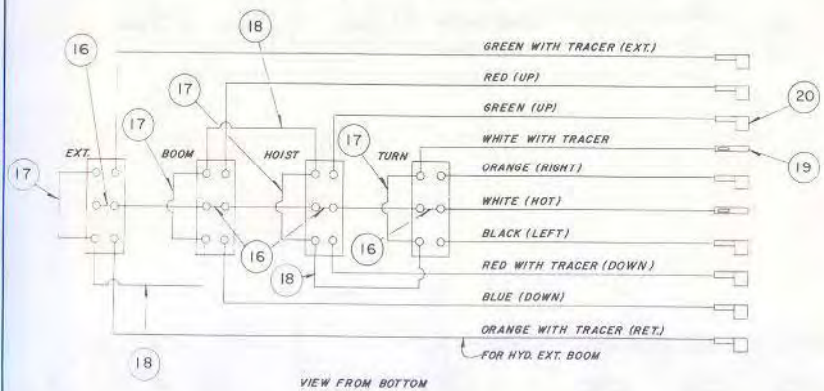
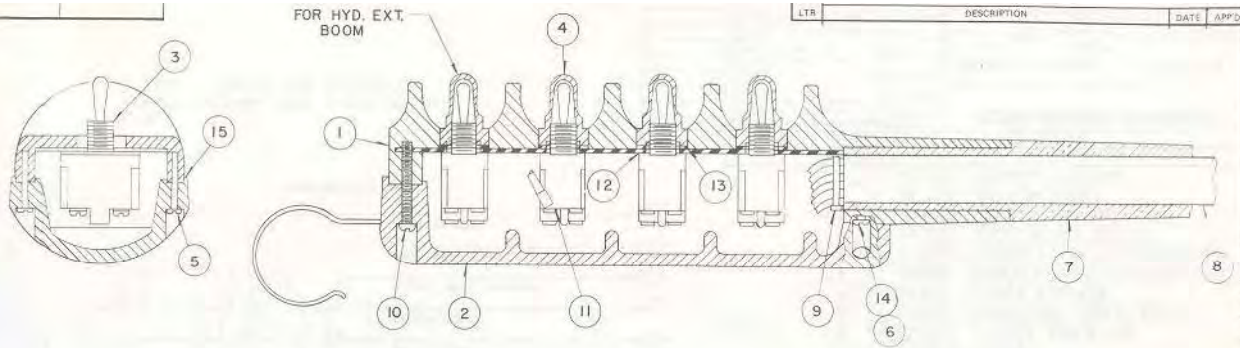


* NOTE:
WHEN ORDERING ITEM 8 (P/N 360280)
ITEMS 19 AND 20 ARE INCLUDED.

20	8	000405	TERMINAL, FLAG (REF.) *
19	2	001102	SPLICE, BUTT (REF.) *
18	3	622347	CONDUCTOR ASS'Y 3 1/8" LG.
17	4	622346	CONDUCTOR ASS'Y 2 1/8" LG.
16	4	636600	JUMPER
15	21	800580	3/4" WIDTH OKONITE RUBBER TAPE
14	4	019700	WASHER, SPLIT LOCK#8 PLATED
13	4	642100	O-RING
12	4	675271	NUT
11	10	000101	TERMINALS T8B
10	1	004700	SCREW, SLT. PAN HD. ST. #8 X 1 1/2
9	2	634401	TY-RAP CABLE TIE
8	1	360280	CONDUCTOR CABLE (23') *
7	1	633801	CABLE ADAPTER
6	2	005101	SCREW, ST.-SLT. PAN HD. #8 X 1 1/4
5	10	005001	SCREW, ST.-SLT. PAN HD. #8 X 3/4
4	4	640302	BOOT, TOGGLE SWITCH
3	4	634200	TOGGLE SWITCH
2	1	631700	BOTTOM COVER
1	1	631601	PENDANT HOUSING

QUANTITY		ITEM QTY		PART NO.		DESCRIPTION	
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED:		DRAWN BY		DATE		LIST OF MATERIAL	
ANGLES: 1/2" XX C. 40		CHK'D BY		DATE		TITLE	
FRACTIONAL: 1/16 XXX 1.010		DATE		END BY		PENDANT ASSEMBLY 4-FUNCTION	
REMOVE ALL BURRS AND SHARP EDGES. DO NOT SCALE THIS DRAWING.		DATE		SCALE		5005H	
TOLERANCES NOT SHOWN ABOVE ARE PER AND Y14.6 - 1993.		DATE		SIZE		C	
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.		DATE		DRAWING NO.		AW-360523	
NEXT ASSY		WEIGHT		REVISION		1	

12/86

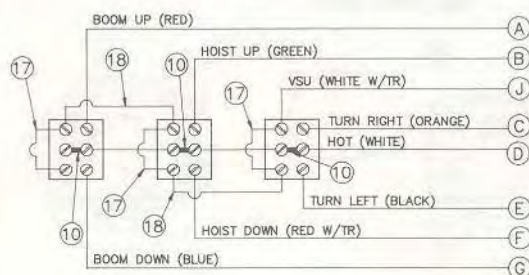
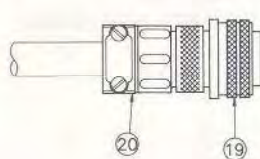


VIEW FROM BOTTOM

20	1	300412	CLAMP,CABLE
19	1	300411	PLUG,ELECTRICAL
18	2	622347	CONDUCTOR ASSY 3 1/8 LG.
17	3	622346	CONDUCTOR ASSY 2 1/8 LG.
16	1	004700	SCREW ST. SLT. PAN HD 8 x 1 1/2
15	21"	800580	3/4" WDE OKONITE RUBBER TAPE
14	3	019700	WASHER SPLIT LOCK 8 PLATED
13	3	642100	O-RING
12	3	675271	NUT
11	8	000101	TERMINALS T & B
10	3	636600	JUMPER
9	2	634401	TY-RAP CABLE TIE
8	1	800630	CONDUCTOR CABLE (23') STD.
7	1	633801	CABLE ADAPTER
6	2	005101	SCREW ST. SLT. PAN HD 8 x 1 1/4
5	10	005001	SCREW ST. SLT. PAN HD 8 x 3/4
4	3	640302	BOOT-TOGGLE SWITCH
3	3	634200	TOGGLE SWITCH
2	1	631700	BOTTOM COVER
1	1	631602	PENDANT HOUSING
ITEM	QTY	PRICE	DESCRIPTION

ITEM	QTY	UQS	PART NO	DESCRIPTION
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TO TOLERANCES UNLESS OTHERWISE SPECIFIED ARE ± 1/2" FRACTIONAL: 1/8" KXX ± .004 DECIMAL: 1/16" KXX ± .002 REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING. TO TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5-1993 THIS IS THE PROPERTY OF AUTO CRANE COMPANY AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS DRAWN BY DATE CHECKED BY TITLE SCALE WEIGHT AUTO CRANE COMPANY P.O. BOX 80001 • TULSA, OKLAHOMA 74158-0052 4702 NORTH WING RD PENDANT ASSEMBLY (3 FUNCTION REMOVABLE) SIZE C DRAWING NO. AW-480400 REVISION SHEET 1 OF 1				

5-010

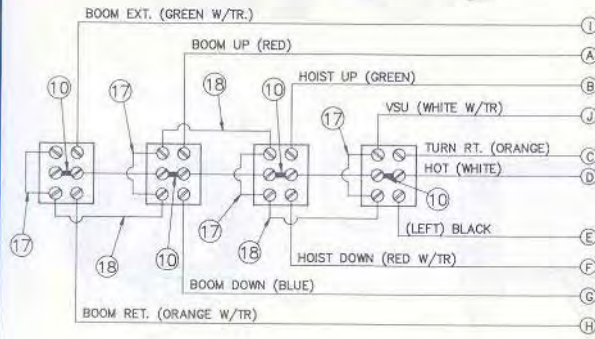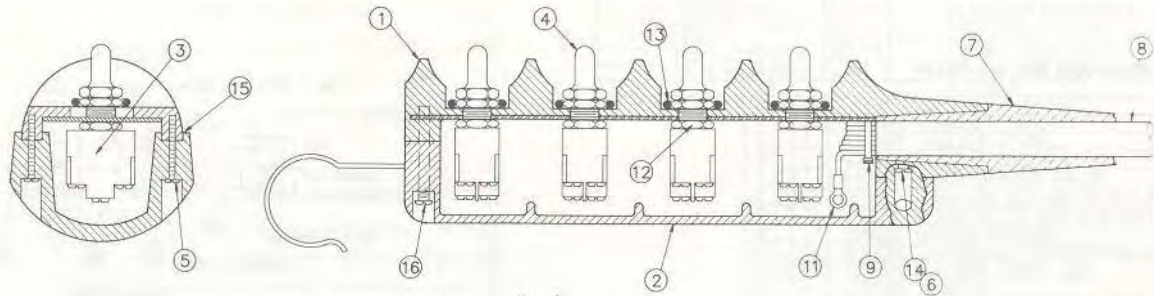


VIEW FROM BOTTOM

ITEM	QTY	DIS	PART NO	DESCRIPTION
20	1		300412	CLAMP, CABLE
19	1		300411	PLUG, ELECTRICAL
18	3		622347	CONDUCTOR ASSY 3 1/8 LG.
17	4		622346	CONDUCTOR ASSY 2 1/8 LG.
16	1		004700	SCREW ST. SLT. PAN HD 8 X 1 1/2
15	21		800580	3/4" WIDE OKONITE RUBBER TAPE
14	4		019700	WASHER SPLIT LOCK 8 PLATED
13	4		642100	O-RING
12	4		675271	NUT
11	10		000101	TERMINALS T & B
10	4		636600	JUMPER
9	2		634401	TY-RAP CABLE TIE
8	1		800632-004	CONDUCTOR CABLE (27")
7	1		633801	CABLE ADAPTER
6	2		005101	SCREW ST. SLT. PAN HD 8 x 1 1/4
5	10		005001	SCREW ST. SLT. PAN HD 8 x 3/4
4	4		640302	BOOT-TOGGLE SWITCH
3	4		634200	TOGGLE SWITCH
2	1		631700	BOTTOM COVER
1	1		631601	PENDANT HOUSING

UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES		DRAWN BY: RD	
TOLERANCES UNLESS OTHERWISE SPECIFIED		DATE: 1-14-88	
ANGLES: 1/2"		CHECK BY:	
FRACTIONAL: 1/16 XXX: 1/8		DATE:	
REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING		ENG BY:	
TOLERANCES NOT SHOWN ABOVE ARE PER AND Y&M 5-1973		DATE:	
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.		SCALE: C	
NEXT ASSY:		WEIGHT:	
LIST OF MATERIAL AUTO CRANE COMPANY P.O. BOX 58807 • TULSA, OKLAHOMA 74158-0807 4301 NORTH MINOR ROAD • P.O. BOX 6463			
TITLE PENDANT ASSEMBLY 4 FUNCTION, REMOVABLE			
DRAWING NO. AW-480800		REVISION:	
SHEET 1 OF 1			

CHG	DESCRIPTION	DATE	APP'D
1	REVISIONS		

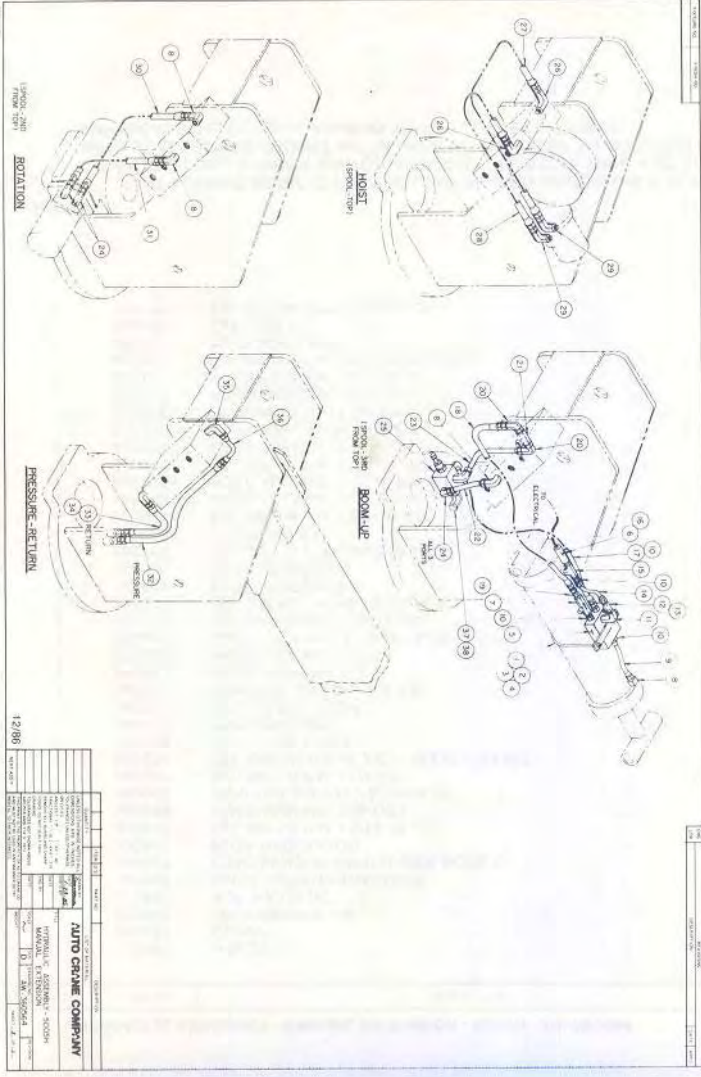


6-1-0.0

HYDRAULIC ASSEMBLY - MANUAL EXTENSION - 5005H - AW-360564

ITEM	QTY	PART NO.	DESCRIPTION
1	1	360581	U-BOLT
2	1	360582	CLAMP
3	2	020200	LOCKWASHER 1/4
4	2	015900	NUT, HX 1/4 NC
5	1	360568	VALVE, COUNTERBALANCE
6	1	360567	LOAD SENSOR SWITCH (SEE NOTE 1)
7	1	330582	FLOW REGULATOR
8	4	200892	ELL, 90° 3/8 P.M. / 9/16-18 JIC
9	1	360098	HOSE ASSEMBLY (8-1/2")
10	3	360042	ADAPTER, 3/8 P.M. / 9/16-18 JIC
11	1	360047	ELL, 90° 3/8 P.M. / 1/4 P.F.
12	1	360574	TEE, BRANCH 9/16 JIC / 1/4 EXT / 1/4 INT
13	2	000209	PLUG, PIPE 1/4-18
14	1	360575	TUBE ASSEMBLY
15	1	360053	TEE, 3/8 P.M. / 3/8 P.F.
16	1	360576	ADAPTER, 3/8 P.M. / 1/4 P.M.
17	1	360573	HOSE ASSEMBLY (23")
18	1	360572	HOSE ASSEMBLY (27")
19	1	360041	ADAPTER, 1/4 P.M. / 9/16-18 JIC
20	2	480194	ELL, 90° SWIVEL 9/16-18 JIC
21	1	360577	TEE, 3/8 P.M. / 9/16-18 JIC RUN
22	1	360571	TUBE ASSEMBLY
23	1	360570	TUBE ASSEMBLY
24	5	202759	ELL, 90° 1/2 P.M. / 9/16-18 JIC
25	1	360566	VALVE, RELIEF
26	2	360044	ELL, 90° 3/8 P.M. / 3/4-16 JIC
27	1	480203	HOSE ASSEMBLY (24-3/4")
28	1	480202	HOSE ASSEMBLY (21-1/2")
29	2	360043	ELL, 90° 1/2 P.M. / 3/4-16 JIC
30	2	480204	HOSE ASSEMBLY (17-1/2")
31	1	200880	ADAPTER, 3/8 P.M. / 1/4 P.F.
32	1	360578	HOSE ASSEMBLY (22-1/4")
33	1	360579	HOSE ASSEMBLY (15-1/2")
34	1	480191	ELL, 45° 3/8 P.M. / 3/4-16 JIC
35	1	480213	ELL, 90° 3/8 P.M. / 3/4-16 JIC LONG
36	1	480211	TUBE ASSEMBLY
37	1	330348	CAP, 7/16 JIC
38	1	330176	ELL, 90° 1/4 NPT / 7/16 JIC 37

NOTES:

1. PART NUMBER 360567 IS FOR THE LOAD SENSOR SWITCH ONLY, IF THE COMPLETE LOAD SENSOR SWITCH ASSEMBLY, (SWITCH, WIRE AND TERMINALS), IS DESIRED ORDER PART NUMBER 360547. REFER TO AW-360548 OR AW-360548-100 ELECTRICAL ASSEMBLIES FOR CORRECT HOOK UP.

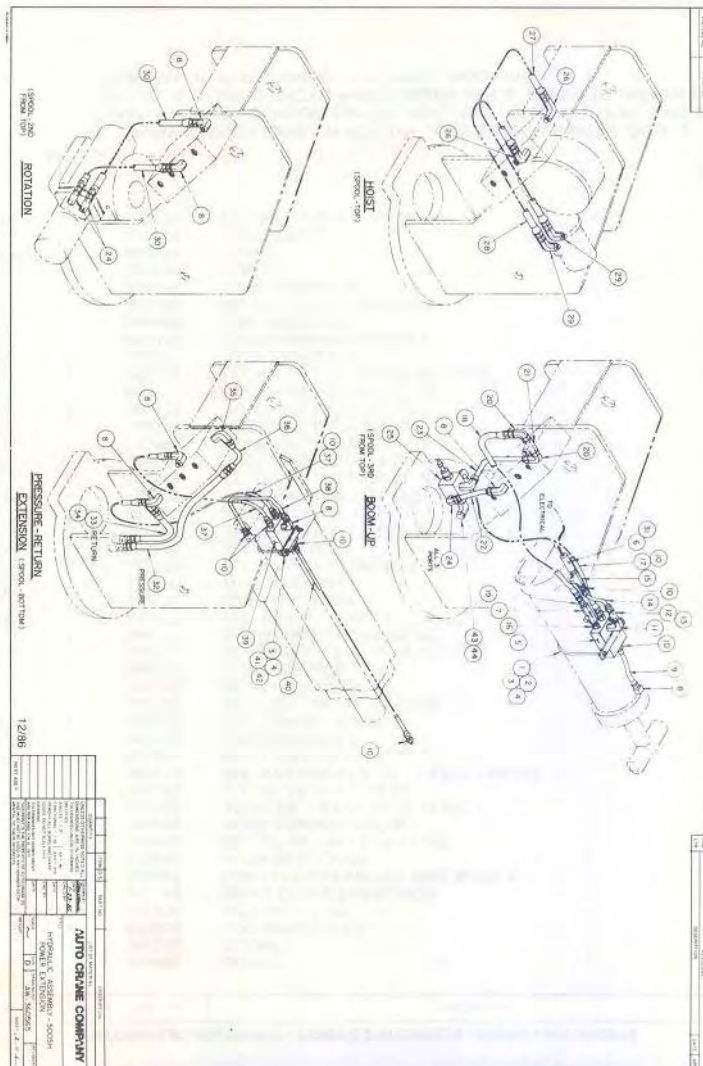

6-2.0.0


HYDRAULIC ASSEMBLY - POWER EXTENSION - 5005H - AW-360565

ITEM	QTY	PART NO	DESCRIPTION
1	1	360581	U-BOLT
2	1	360582	CLAMP
3	4	020200	LOCKWASHER 1/4
4	4	015900	NUT, HX, 1/4 NC
5	1	360568	VALVE, COUNTERBALANCE
6	1	360567	LOAD SENSOR SWITCH (SEE NOTE 1)
7	1	330582	FLOW REGULATOR
8	7	200892	ELL, 90° 3/8 P.M. / 9/16-18 JIC
9	1	360098	HOSE ASSEMBLY (8-1/2")
10	8	360042	ADAPTER, 3/8 P.M. / 9/16-18 JIC
11	1	360047	ELL, 90° 3/8 P.M. / 1/4 P.F.
12	1	360574	TEE, BRANCH 9/16 JIC / 1/4 EXT / 1/4 INT
13	2	000209	PLUG, PIPE 1/4-18
14	1	360575	TUBE ASSEMBLY
15	1	360053	TEE, 3/8 P.M. / 3/8 P.F.
16	1	360576	ADAPTER, 3/8 P.M. / 1/4 P.M.
17	1	360573	HOSE ASSEMBLY (23")
18	1	360572	HOSE ASSEMBLY (27")
19	1	360041	ADAPTER, 1/4 P.M. / 9/16-18 JIC
20	2	480194	ELL, 90° SWIVEL 9/16-18 JIC
21	1	360577	TEE, 3/8 P.M. / 9/16-18 JIC RUN
22	1	360571	TUBE ASSEMBLY
23	1	360570	TUBE ASSEMBLY
24	5	202759	ELL, 90° 1/2 P.M. / 9/16-18 JIC
25	1	360566	VALVE, RELIEF
26	2	360044	ELL, 90° 3/8 P.M. / 3/4-16 JIC
27	2	480203	HOSE ASSEMBLY (24-3/4")
28	1	480202	HOSE ASSEMBLY (21-1/2")
29	2	360043	ELL, 90° 1/2 P.M. / 3/4-16 JIC
30	2	480204	HOSE ASSEMBLY (17-1/2")
31	1	200880	ADAPTER, 3/8 P.M. / 1/4 P.F.
32	1	360578	HOSE ASSEMBLY (22-1/4")
33	1	360579	HOSE ASSEMBLY (15-1/2")
34	1	480191	ELL, 45° 3/8 P.M. / 3/4-16 JIC
35	1	480213	ELL, 90° 3/8 P.M. / 3/4-16 JIC LONG
36	1	480211	TUBE ASSEMBLY
37	2	360075	HOSE ASSEMBLY (30-3/4")
38	1	360069	TUBE ASSEMBLY
39	1	360153	VALVE, COUNTERBALANCE
40	1	360070	TUBE ASSEMBLY
41	1	360091	U-BOLT
42	1	360092	CLAMP
43	1	330348	CAP, 7/16 JIC
44	1	330176	ELL, 90° 1/4 NPT / 7/16 JIC 37

NOTES:

1. PART NUMBER 360567 IS FOR THE LOAD SENSOR SWITCH ONLY. IF THE COMPLETE LOAD SENSOR SWITCH ASSEMBLY, (SWITCH, WIRE AND TERMINALS), IS DESIRED ORDER PART NUMBER 360550. REFER TO AW-360551 OR AW-360551-100 FOR CORRECT ELECTRICAL HOOK UP.

6-3-00

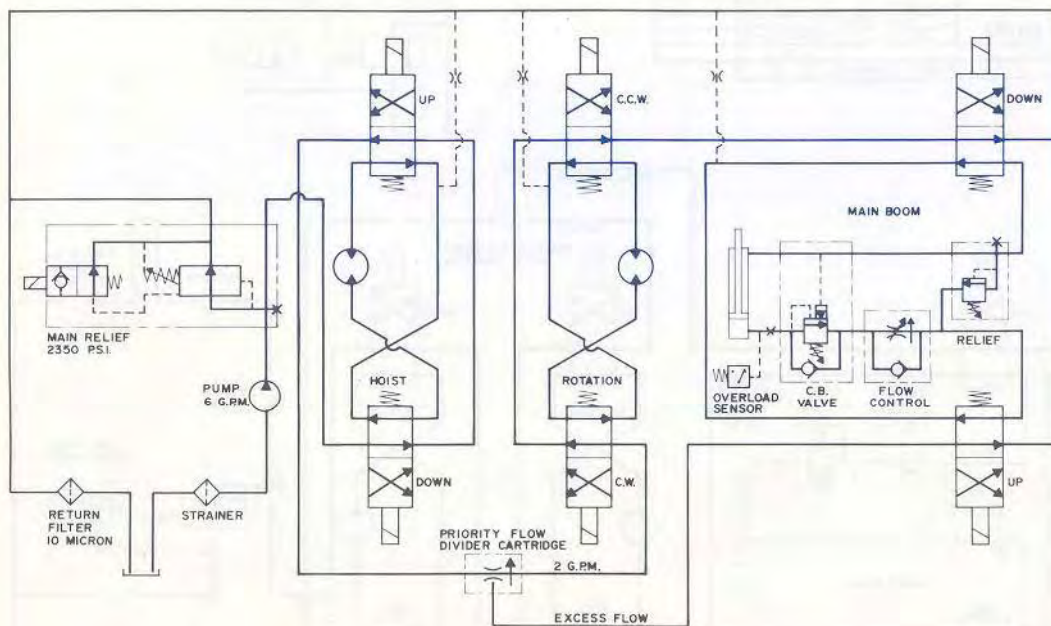

RELIEF VALVE SHOWN WITH SOLENOID ENERGIZED

12/86

QUANTITY	ITEM	D/S	PART NO.	DESCRIPTION
LIST OF MATERIAL				
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED: ANGLES - 1/2" XXX - 40 FRACTIONAL 1/32 XXX 1.010 REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER ASS. Y14.5 1973				
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS				
DRAWN BY		DATE		
CHECK BY		DATE		
TITLE		DATE		
SCALE		DATE		
SIZE		DATE		
DRAWING NO.		DATE		
WEIGHT		DATE		
SHEET		DATE		



AUTO CRANE COMPANY

HYDRAULIC SCHEMATIC
5005H
(WITHOUT POWER EXTENSION)

AW-360653

SHEET 1 OF 1

6-4-0-0

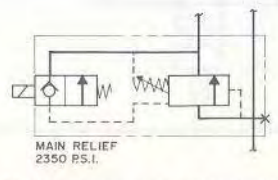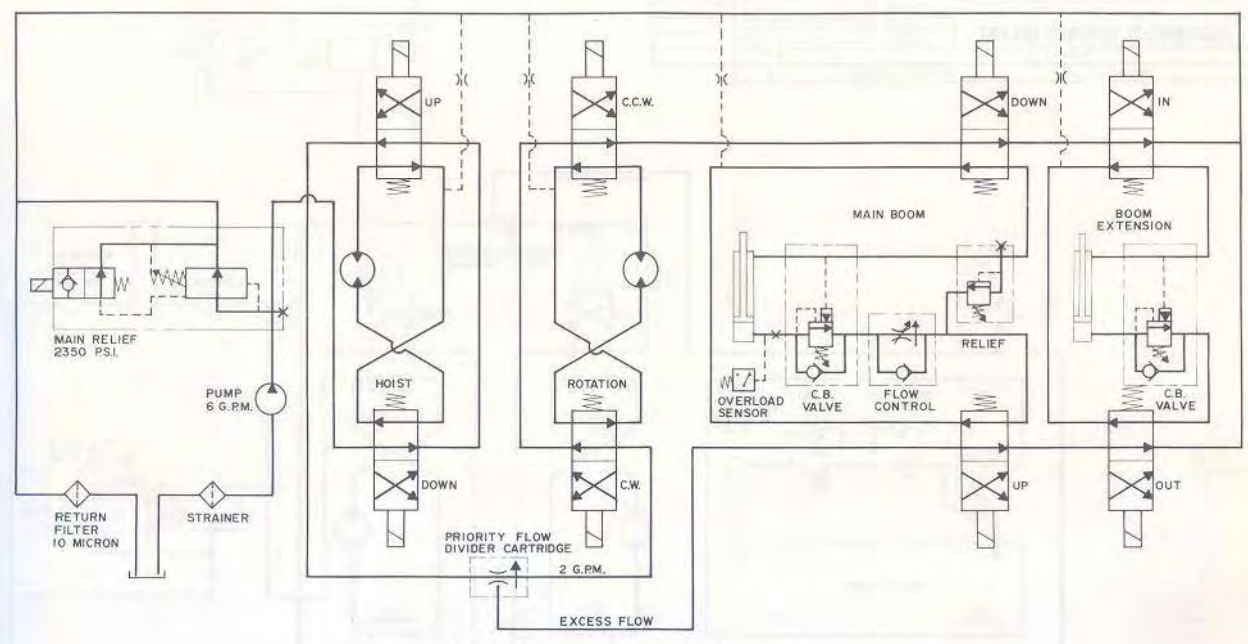


RELIEF VALVE SHOWN WITH SOLENOID ENERGIZED

QUANTITY		ITEM	D/S	PART NO.	DESCRIPTION
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED:					
ANGLES: 1/2"		XX 1/2"		DATE: 7/16/80	
FRACTIONAL: 1/16		XX 1/16"		DATE:	
REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING				DATE:	
TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5, 1973				DATE:	
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.					

LIST OF MATERIAL			
AUTO CRANE COMPANY			
TITLE: HYDRAULIC SCHEMATIC 5005H (WITH POWER EXTENSION)			
SCALE: C	SIZE: C	DRAWING NO: AW-360654	REVISION:
WEIGHT:	SHEET: 1 OF 1		

12/86

NEXT ASS'Y

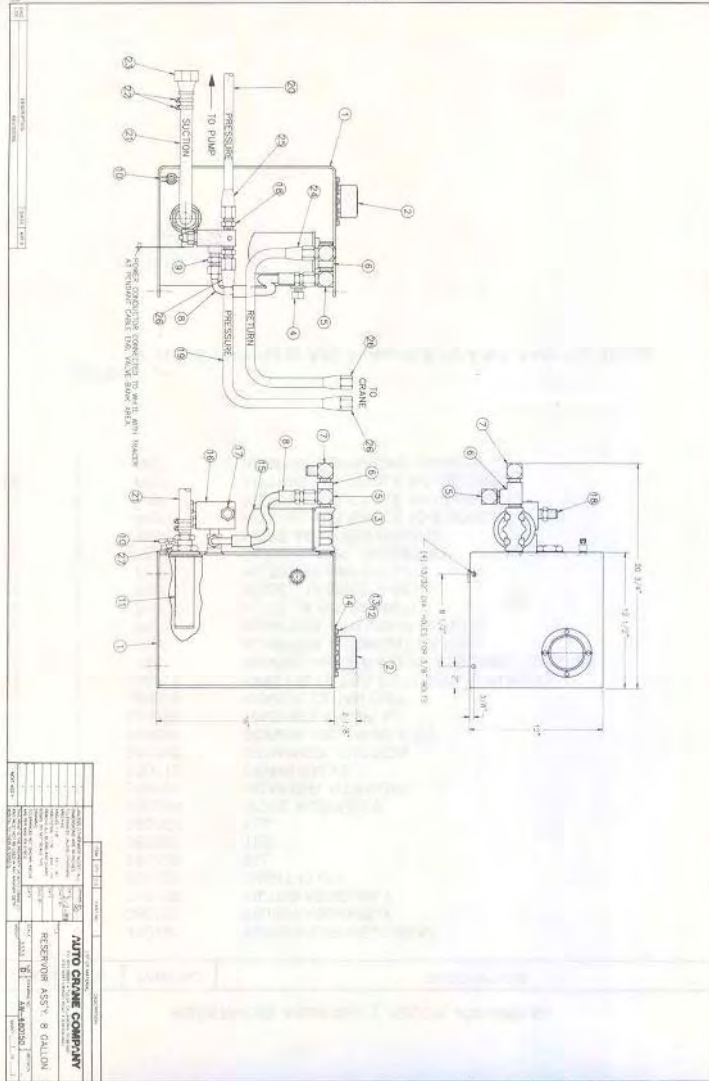


ITEM NO.		DESCRIPTION	QTY	UNIT
1	1	MAIN TANK	1	EA
2	1	CRANE	1	EA
3	1	PRESSURE LINE	1	EA
4	1	SUCKER LINE	1	EA
5	1	RETURN LINE	1	EA
6	1	HOSE	1	EA
7	1	CONNECTOR	1	EA
8	1	VALVE	1	EA
9	1	FLANGE	1	EA
10	1	CRANE	1	EA
11	1	WHEEL	1	EA
12	1	AXLE	1	EA
13	1	BRACKET	1	EA
14	1	SCREW	1	EA
15	1	NUT	1	EA
16	1	WASHER	1	EA
17	1	PIPE	1	EA
18	1	FLANGE	1	EA
19	1	VALVE	1	EA
20	1	HOSE	1	EA
21	1	CONNECTOR	1	EA
22	1	FLANGE	1	EA
23	1	SCREW	1	EA
24	1	NUT	1	EA
25	1	WASHER	1	EA
26	1	PIPE	1	EA
27	1	FLANGE	1	EA
28	1	VALVE	1	EA
29	1	HOSE	1	EA
30	1	CONNECTOR	1	EA
31	1	FLANGE	1	EA
32	1	SCREW	1	EA
33	1	NUT	1	EA
34	1	WASHER	1	EA
35	1	PIPE	1	EA
36	1	FLANGE	1	EA
37	1	VALVE	1	EA
38	1	HOSE	1	EA
39	1	CONNECTOR	1	EA
40	1	FLANGE	1	EA
41	1	SCREW	1	EA
42	1	NUT	1	EA
43	1	WASHER	1	EA
44	1	PIPE	1	EA
45	1	FLANGE	1	EA
46	1	VALVE	1	EA
47	1	HOSE	1	EA
48	1	CONNECTOR	1	EA
49	1	FLANGE	1	EA
50	1	SCREW	1	EA
51	1	NUT	1	EA
52	1	WASHER	1	EA
53	1	PIPE	1	EA
54	1	FLANGE	1	EA
55	1	VALVE	1	EA
56	1	HOSE	1	EA
57	1	CONNECTOR	1	EA
58	1	FLANGE	1	EA
59	1	SCREW	1	EA
60	1	NUT	1	EA
61	1	WASHER	1	EA
62	1	PIPE	1	EA
63	1	FLANGE	1	EA
64	1	VALVE	1	EA
65	1	HOSE	1	EA
66	1	CONNECTOR	1	EA
67	1	FLANGE	1	EA
68	1	SCREW	1	EA
69	1	NUT	1	EA
70	1	WASHER	1	EA
71	1	PIPE	1	EA
72	1	FLANGE	1	EA
73	1	VALVE	1	EA
74	1	HOSE	1	EA
75	1	CONNECTOR	1	EA
76	1	FLANGE	1	EA
77	1	SCREW	1	EA
78	1	NUT	1	EA
79	1	WASHER	1	EA
80	1	PIPE	1	EA
81	1	FLANGE	1	EA
82	1	VALVE	1	EA
83	1	HOSE	1	EA
84	1	CONNECTOR	1	EA
85	1	FLANGE	1	EA
86	1	SCREW	1	EA
87	1	NUT	1	EA
88	1	WASHER	1	EA
89	1	PIPE	1	EA
90	1	FLANGE	1	EA
91	1	VALVE	1	EA
92	1	HOSE	1	EA
93	1	CONNECTOR	1	EA
94	1	FLANGE	1	EA
95	1	SCREW	1	EA
96	1	NUT	1	EA
97	1	WASHER	1	EA
98	1	PIPE	1	EA
99	1	FLANGE	1	EA
100	1	VALVE	1	EA

RESERVOIR ASSEMBLY, 5005H, AW-480150

ITEM	QTY.	PART NO.	DESCRIPTION
1	1	480151	RESERVOIR WELDMENT
2	1	360151	FILLER ASSEMBLY
3	1	360156	FILTER ASSEMBLY
4	1	360150	SIGHT PLUG
5	1	551222	ELL
6	1	360262	TEE
7	1	360263	ELL
8	1	360284	HOSE ASSEMBLY
9	1	360054	ADAPTER, STRAIGHT
10	1	750715	DRAIN VALVE
11	1	360282	STRAINER, SUCTION
12	4	005500	SCREW, HX. 1/4-20 X 3/4"
13	4	020200	WASHER, 1/4 SP. LK.
14	1	360249	COVER, CLEAN OUT
15	1	360277	SPIN ON FILTER (FOR REPLACEMENT)
16	1	REF.	VENTED RELIEF VALVE ASSEMBLY (360247)
17	1	REF.	ADAPTER, STRAIGHT (360054)
18	1	REF.	ADAPTER, STRAIGHT (551215)
19	1	REF.	HOSE, -8 (551228-001)
20	1	REF.	HOSE, -12 (360274-001)
21	1	REF.	HOSE, -16 (360275-001)
22	4	REF.	HOSE CLAMP, -16 (360268)
23	1	REF.	HOSE ADAPTER (360273)
24	1	REF.	FITTING, REUSABLE 10-8 (551227)
25	2	REF.	FITTING, REUSABLE 10-12 (360269)
26	3	REF.	FITTING, REUSABLE 8-8 (360266)
27	1	REF.	ADAPTER, STRAIGHT (360270)

NOTES:


- ITEMS 17 THRU 27 ARE AVAILABLE AS A KIT, PART NO. 480159

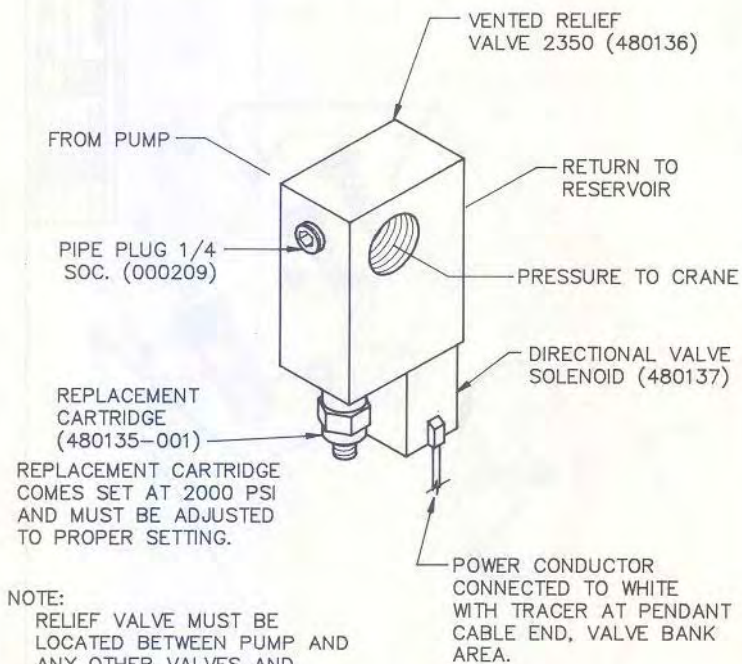


AW-092
VENTED RELIEF VALVE
ASSEMBLY, WITH SOLENOID

PART NO. 360247

6-7:0.0

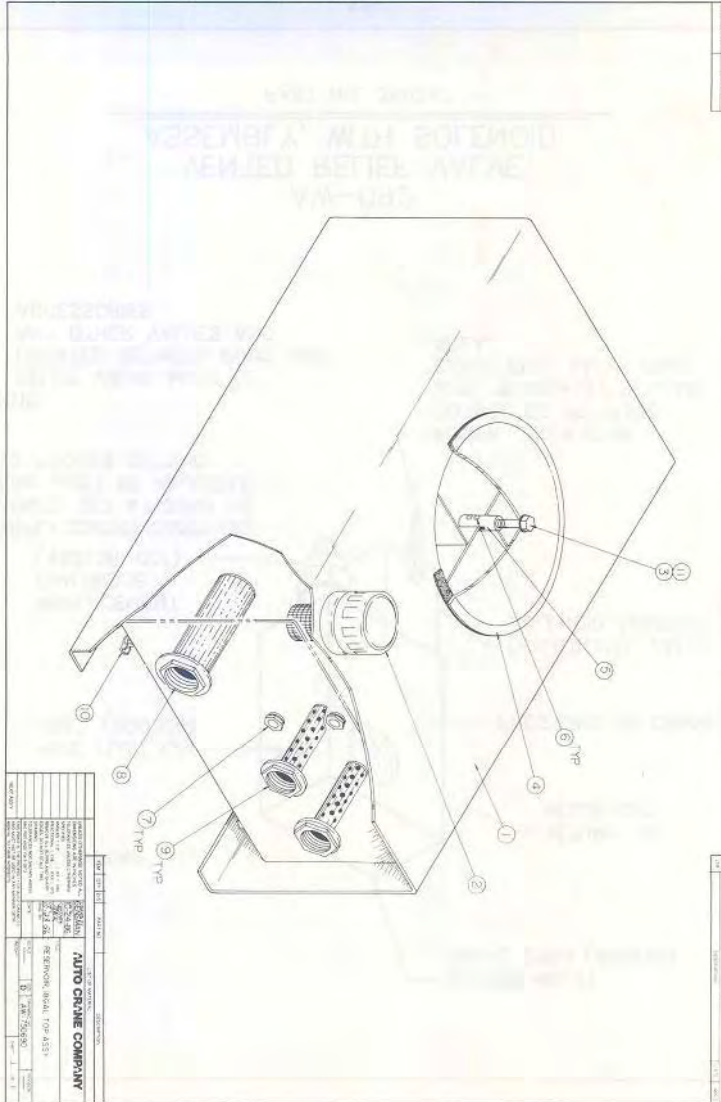

7-1.0.0

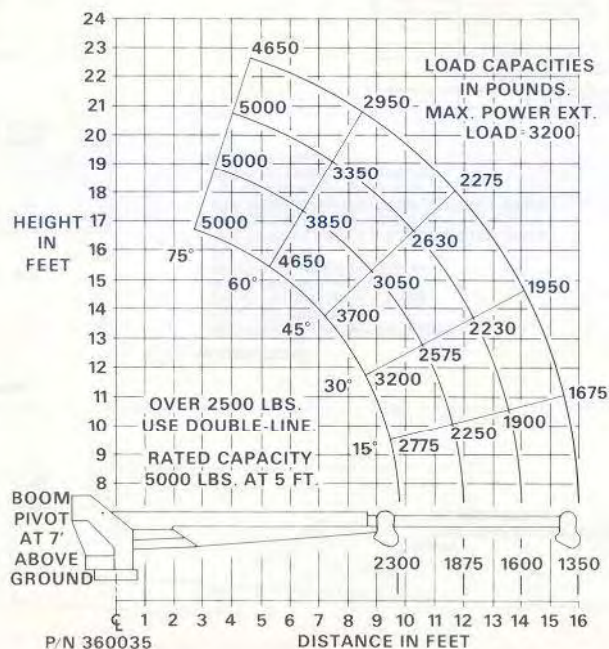

NOTE:
DIMENSION FROM BASE OF
CRANE TO CENTER OF BOOM
PIVOT POINT IS 27 7/8"

AUTO CRANE COMPANY


TITLE

LOAD CHART-5005H

DWG. NO.

AW-360035


12/86

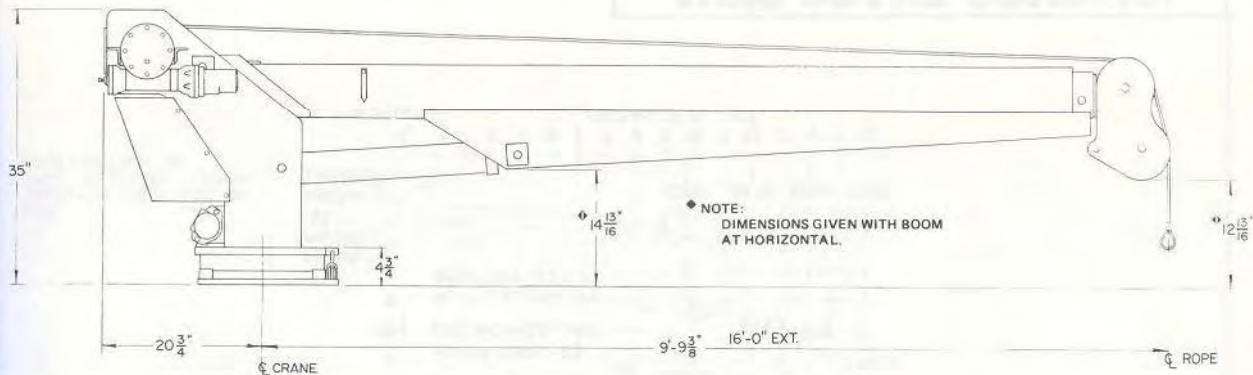

SPECIFICATIONS:

BOOM LENGTH=9'-9 ³/₈" (RETRACTED) TO 16'-0"
 (FULLY EXTENDED).
 CRANE WEIGHT= APPX. 890 LBS.
 POWER SOURCE=HYDRAULIC
 REMOTE MOUNTED RESERVOIR
 370° ROTATION
 MAX. TURNING RADIUS (FROM CENTER OF CRANE)
 @ HOIST ACTUATOR - 23 ³/₁₆"
 MAX. TURNING RADIUS (FROM CENTER OF CRANE)
 @ ROTATION MOTOR=13 ¹⁷/₃₂"
 OPERATING PRESSURE 2350 PSI
 OIL FLOW 6 GPM

NOTE:
 ALL DIMENSIONS IN INCHES
 UNLESS OTHERWISE NOTED.


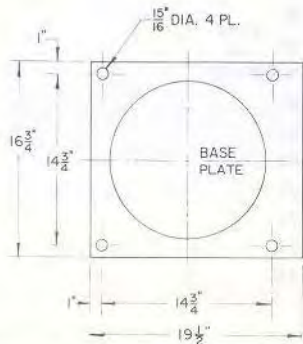


QUANTITY	ITEM	D.S.	PART NO.	DESCRIPTION
LIST OF MATERIAL				
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED:				
ANGLES: 1/2" XX - 40				
FRACTIONAL: 1/16 XXX - 8/10				
REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING.				
TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5-1993				
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER OR FOR RENTAL TO THEIR INTERESTS.				
NEXT ASSY				

DRAWN BY 10/25/2009 DATE 1-6-85 CHK'D BY DATE ENG. BY DATE	TITLE 5005H DIMENSIONAL W/ SPEC'S	SCALE C	DRAWING NO. ENG 168	REVISION
---	--------------------------------------	------------	------------------------	----------

FIXTURE NO.	FINISH NO.

CHG	REVISIONS	DATE	APP'D
LTR	DESCRIPTION		

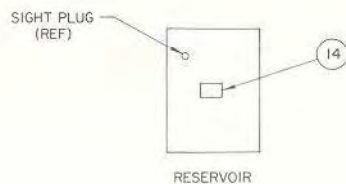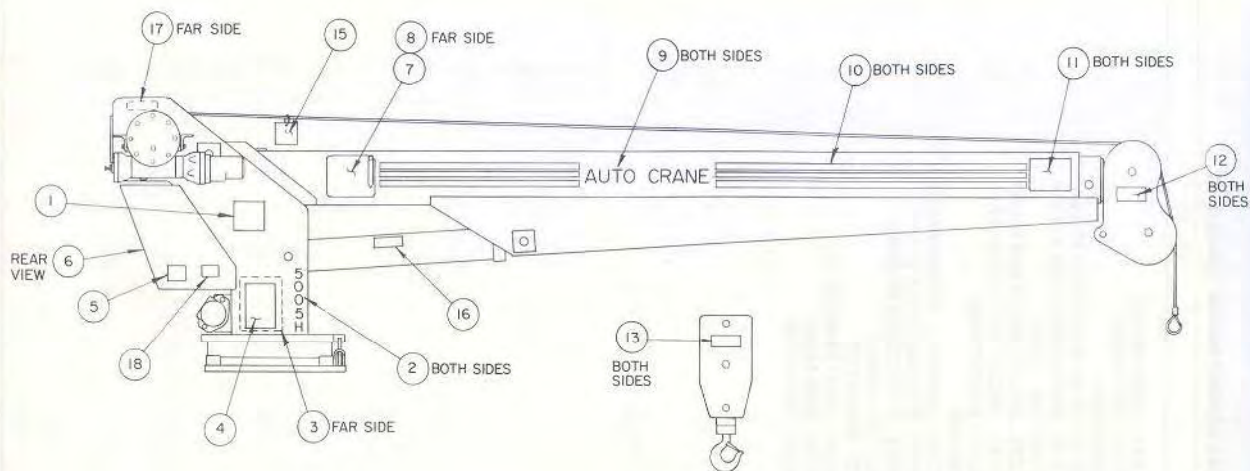


QUANTITY	ITEM	D/S	PART NO.	DESCRIPTION
LIST OF MATERIAL				
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED: ANGLES: 1/2" XX ± .40 FRACTIONAL: 1/16" XXX ± .010 REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER AND Y14.5-1993.				
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.				
NEXT ASSY				
DRAWN BY: <u>CHILLER</u> DATE: <u>10-1-85</u> CHECKED BY: <u>DAVE</u> DATE: <u>10-1-85</u> TITLE: <u>DECAL LAYOUT - 5005H</u> SCALE: <u>C</u> SIZE: <u>C</u> DRAWING NO.: <u>AW-360552</u> REVISION: <u> </u> WEIGHT: <u> </u> SHEET: <u> </u> OF: <u> </u>				

8-200


DECAL LAYOUT 5005H - AW-360552

ITEM	QTY	PART NO.	DESCRIPTION
1	1	040579	DECAL - WORK RULES
2	2	360033	DECAL - 3M - 5005H
3	1	360035	LOAD CHART
4	1	040580	DECAL - MUST NOT OPERATE UNLESS...
5	1	040632	DECAL - WARNING CYCL. INOP.
6	1	360034	DECAL - 3M - LOGO
7	1	360036	DECAL - ANGLE INDICATOR RIGHT
8	1	360037	DECAL - ANGLE INDICATOR LEFT
9	2	040624	DECAL - AUTO CRANE
10	13'	040620	STRIPING
11	2	040529	DECAL - WARNING - BOOM SHOCK
12	2	040517	DECAL - STAY CLEAR OF BOOM
13	2	040630	DECAL - STAY CLEAR OF LOAD
14	1	040633	CAUTION - 6 GPM.
15	1	999943	INST. CHECKLIST
16	1	040587	DECAL - LOAD SENSOR
17	1	330622	DECAL - SERIAL NO.
18	1	330633	DECAL - OPTI-FLOW

001-6

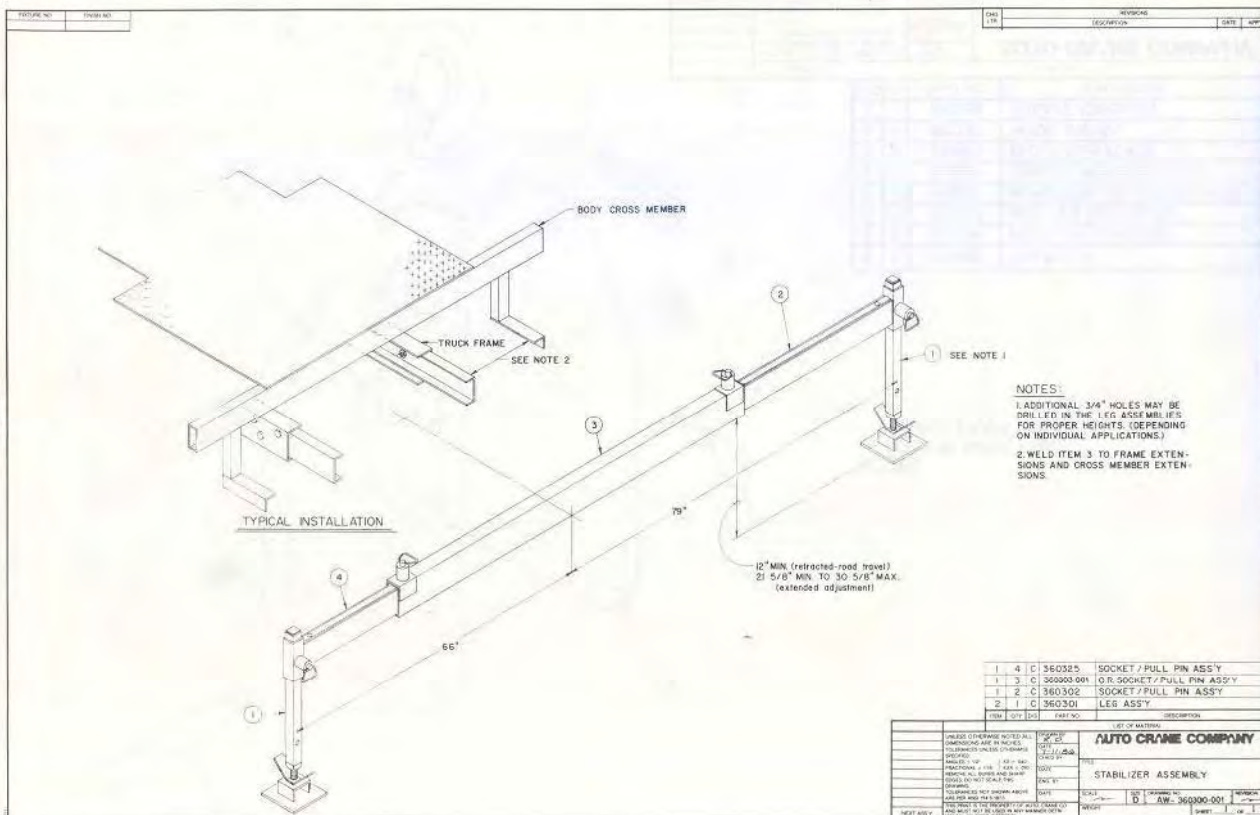

9-200

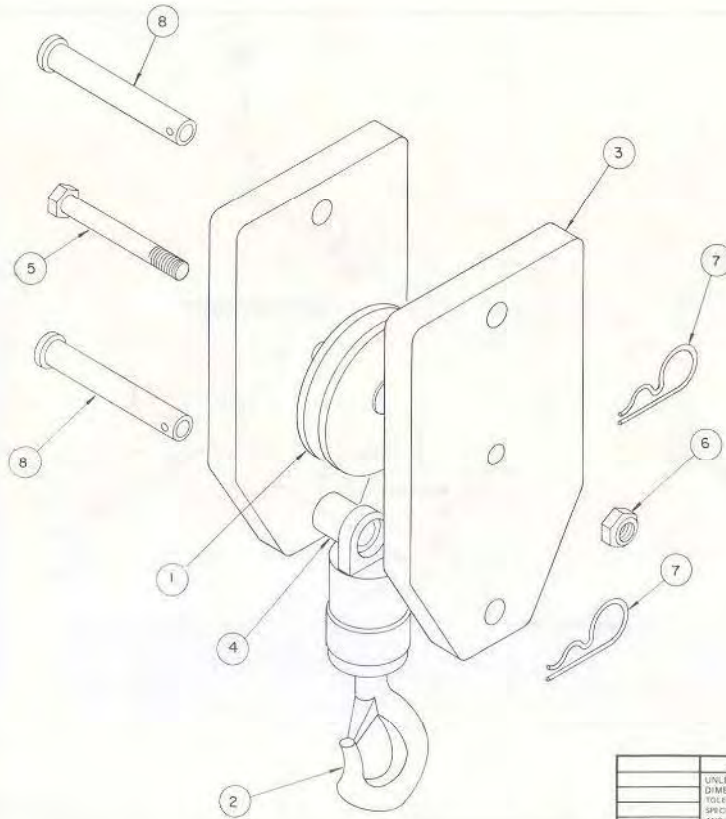

NOTES
1. FOR BEARING ONLY-
ORDER PART NUMBER 240234

8	2	360605	PIN, BLOCK
7	2	360124	HITCH, PIN (HAIR PIN)
6	1	017800	NUT, HEX.-LOC 1/2 - 20
5	1	006801	SCREW, HX.-HD. 1/2 - 20 X 4" LG
4	1	240237	SPACER, BUSHING 1" O.D.
3	2	360601	BLOCK SIDE PLATE
2	1	200197	HOOK, SWIVEL
1	1	240236	SHEAVE ASSEMBLY
ITEM	QTY	PART NO.	DESCRIPTION

QUANTITY		LIST OF MATERIAL	
UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES. TOLERANCES UNLESS OTHERWISE SPECIFIED: ANGLES: 1/2" XX 1/4" FRACTIONAL: 1/16" XXX 1/32" REMOVE ALL BURRS AND SHARP EDGES DO NOT SCALE THIS DRAWING. TOLERANCES NOT SHOWN ABOVE ARE PER ANSI Y14.5, 1993.		DRAWN BY DATE	AW-360602
		CHK'D BY DATE	
		END BY DATE	
		SCALE	SCALE C
THIS PRINT IS THE PROPERTY OF AUTO CRANE CO. AND MUST NOT BE USED IN ANY MANNER DETRIMENTAL TO THEIR INTERESTS.		WEIGHT	AW-360602
NEXT ASSY		SHEET 1 OF 1	

AUTO CRANE COMPANY

TRAVELING BLOCK ASSEMBLY
5005H

SCALE C

AW-360602

REVISED

1